



Cobra 4x4 Gen 2 Aluminium Tub Canopy Installation Guide

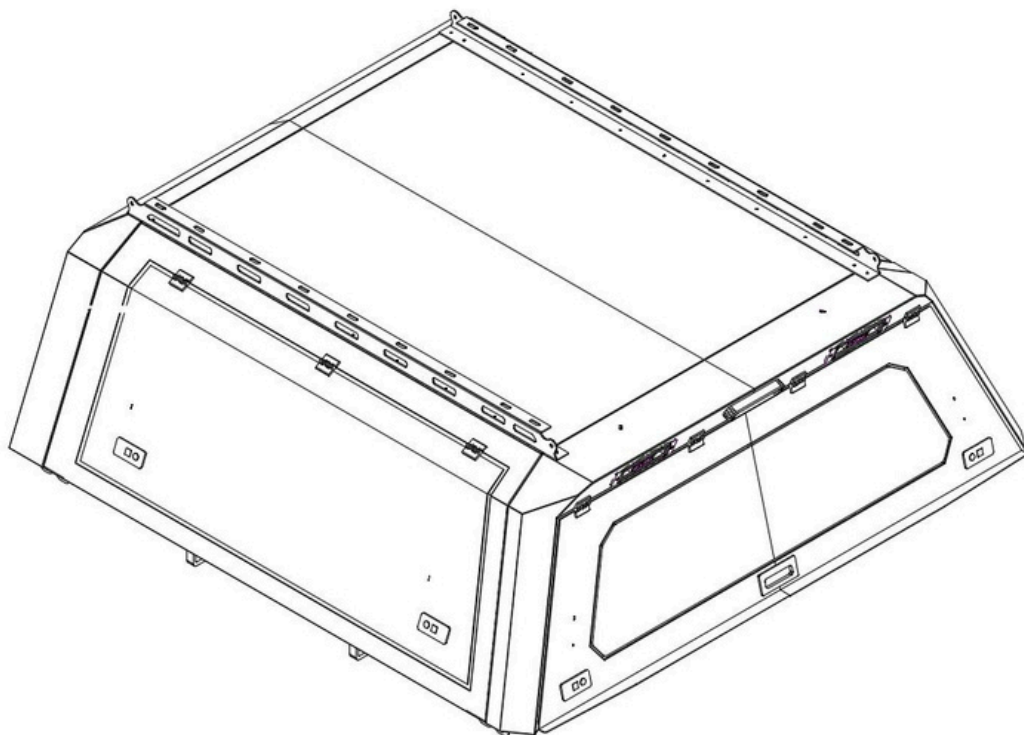


IMPORTANT NOTE:

Please read the instructions carefully to avoid any damage to the canopy and the vehicle.

Required parts for assembly:



1x front door



1x rear door



side panels



1x canopy
roof



2x canopy rails



2x spacer bar



3x LED lights



Sponge strip




LED Brake light



Sealing strip




Washer

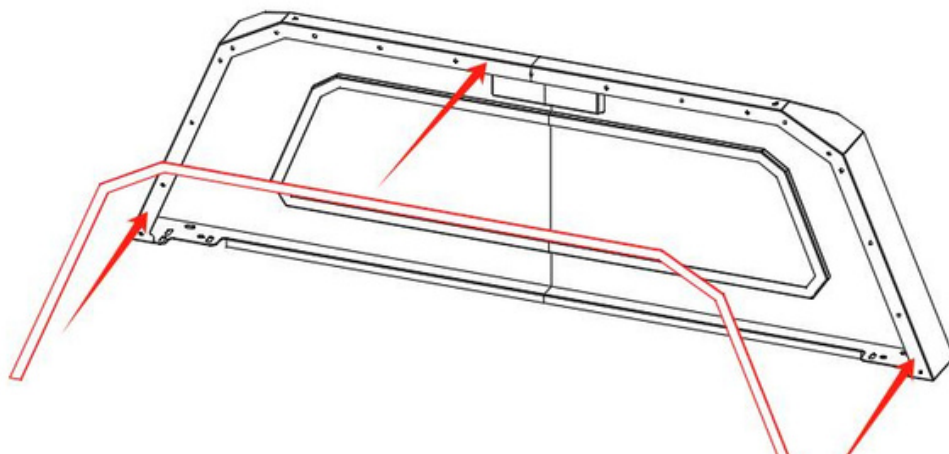


Attach the sponge strips on the screw holes of the front and rear door

Attach a sponge strip between the canopy roof and canopy rails

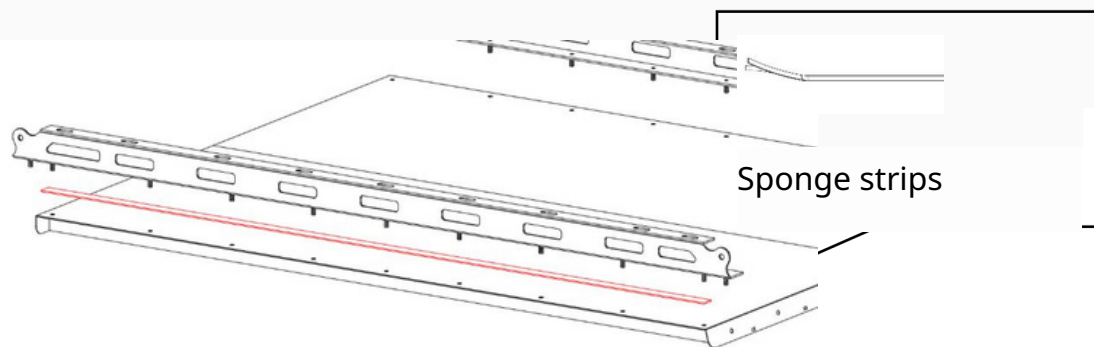


Assembly Instructions

1. Assemble the front door, rear door and side panels as illustrated below.

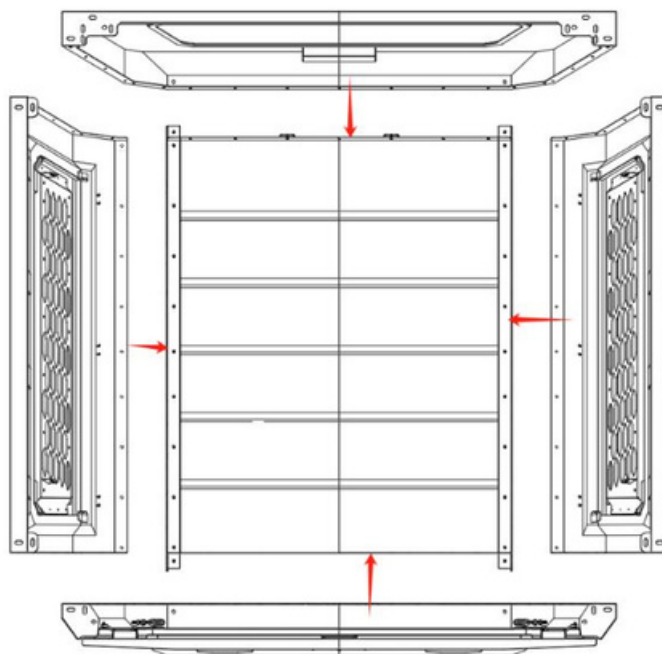

2. Screw the parts into place.

3. Once assembled, secure the canopy onto the tub using the supplied brackets.

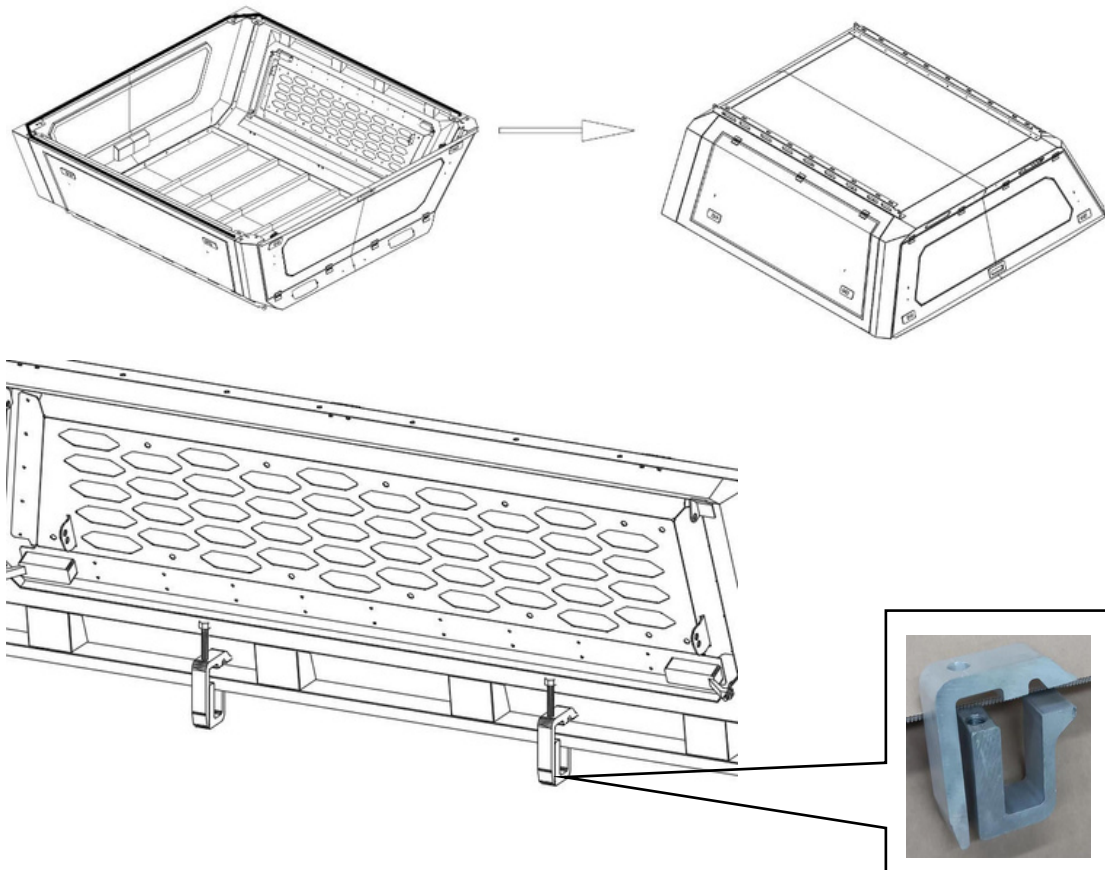

4. Attach and install the LED lights.

