


Installation of Truck bed rack

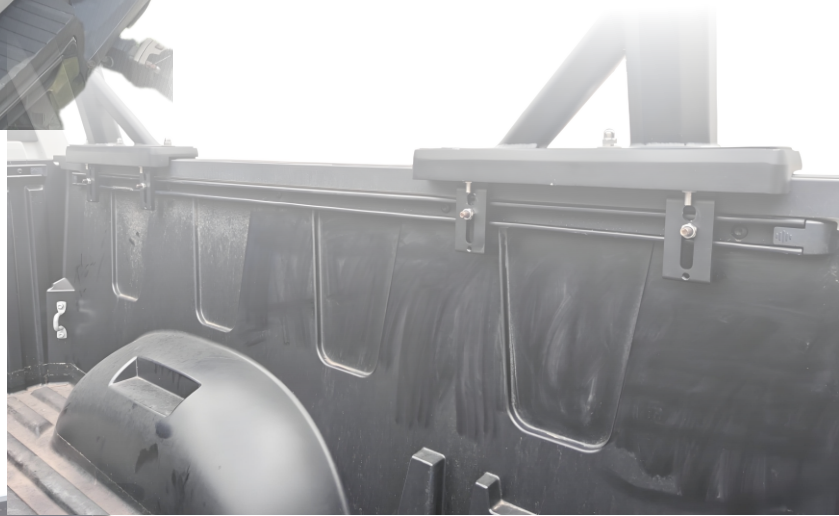







Note

Read this instruction carefully before installation.

- Proper tools will improve installation quality and reduce the time required.
- Please take photos and contact us in case of missing or damaged parts.
- After installation, check if all bolts are securely installed.
- If the Truck Bed has a Bed Liner, please cut the required installation position by yourself.

List A & B

LA			
No	List	Qty	Picture
1	Crossbar	2	
2	Base triangle bracket	4	
3	Base bracket	4	
4	Base bracket rubber pad	4	
5	Adjustable support rod	2	
6	U-shaped bracket	8	
\	\	\	

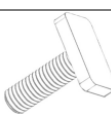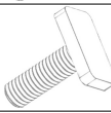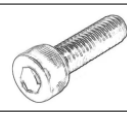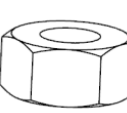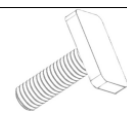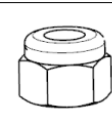
LB									
No	List	Picture	Qty	Accessories classification	No	List	Picture	Qty	Accessories classification
1	M8*25 Washer		12	#1 Base bracket accessory kit	7	M8*30 Round hex bolt		8	#2 U-shaped bracket accessory kit
2	M8*25 T-bolt		12		8	M8 hex nut		8	
3	M8*35 T-bolt		12		9	M6*55 hex bolt		8	
4	M8 ball nut		12		10	M6 hex nut		8	
\	\	\			11	Allen key		1	#4 Tool
5	M8*16 Washer		16	#3 Crossbar base accessory kit	12	M8 spring washer		20	
6	M8*16 Round hex bolt		16		13	M8*40 T-bolt		8	#5 Guide rail groove accessory kit
\	\	\			14	M8 Nylock Nut		8	

Step 1: Installation steps of Base bracket

Truck bed rail installation:

need to use **#1 Base bracket accessory kit** and **#2 U-shaped bracket accessory kit**

1. Loosen the M8 bolts on the 2 **U-shaped brackets (LA No.6)**, install them inside the edge of the car bed, and tighten the M8 bolts;

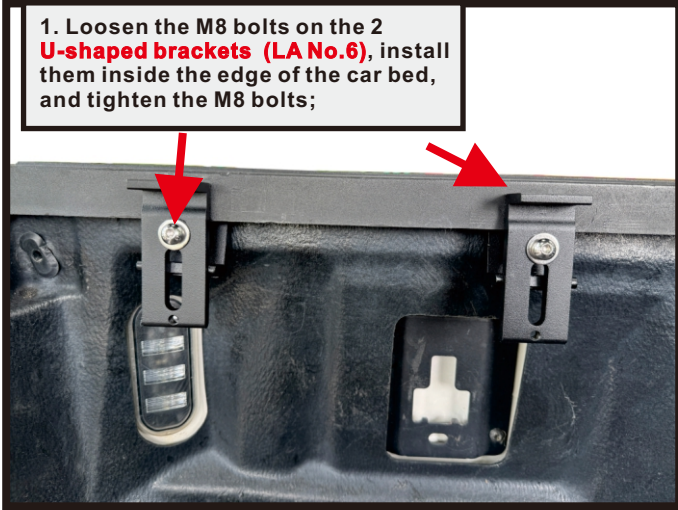

2. Install 3 **M8*25 T-bolt (LB No.2)** in the designated position of the **Base bracket (LA No.3)**, and then cover the **Base bracket rubber (LA No.4)**;



3. Place the Base bracket on the edge of the Truck bed and correspond to the position of the U-shape bracket;





4. Install 2 **M8*30 Round hex bolt (LB No.7)** into the base bracket hole and connect it to the top bolt hole of the U-shape bracket. Finally, fix it with **M8 hex nut (LB No.8)**;





Note: If the base bracket is not flat after installation, you can choose to use **M6*55 hex bolt (LB No.9)** & **M6 hex nut (LB No.10)** to install and support the base bracket


Step 2: Installation steps of Base bracket

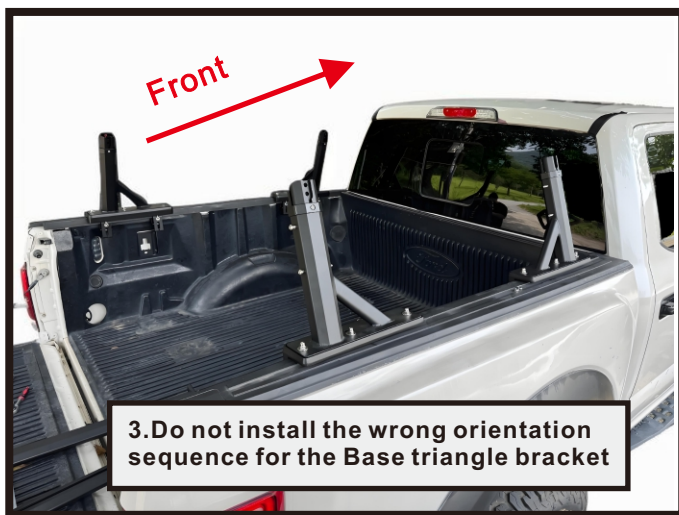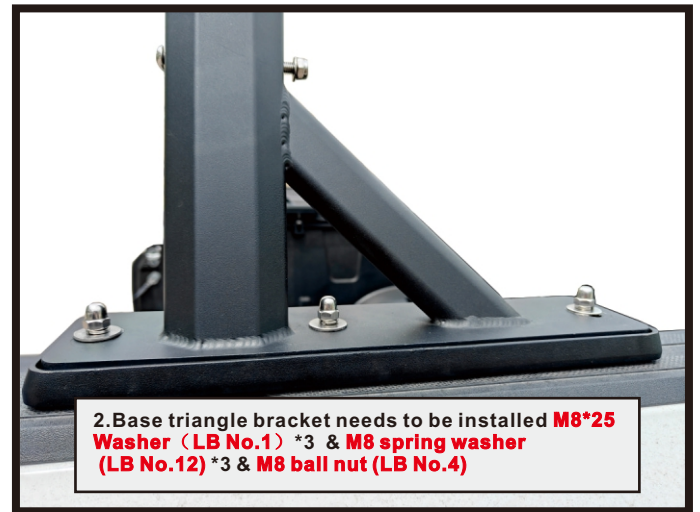

Step 3: Installation steps of Adjustable support rod

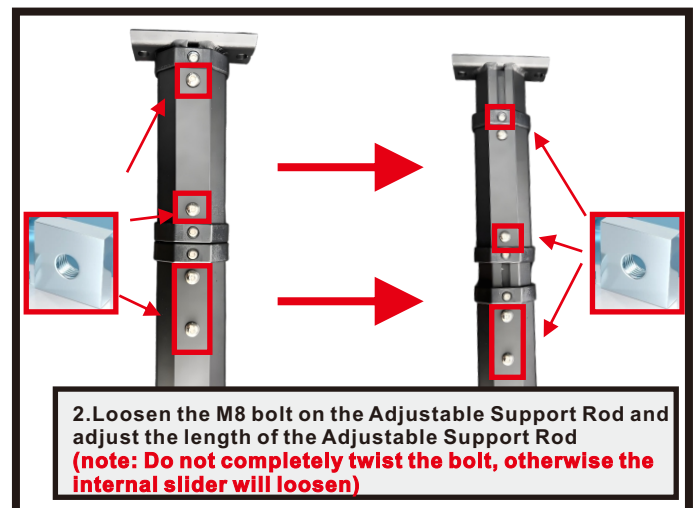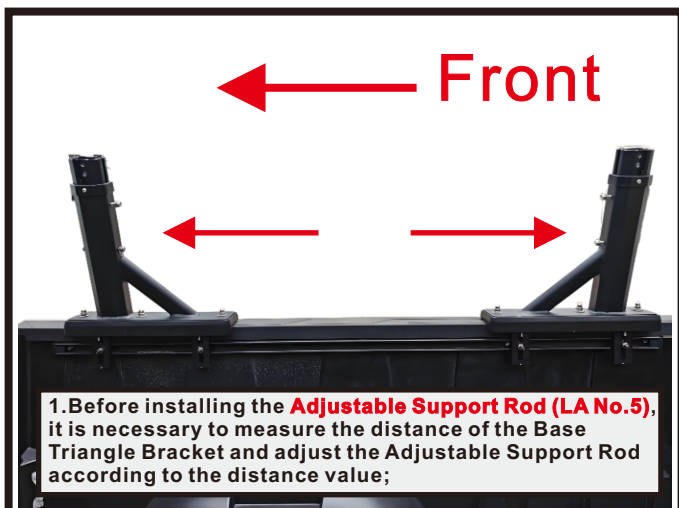


Installation of Truck bed rack

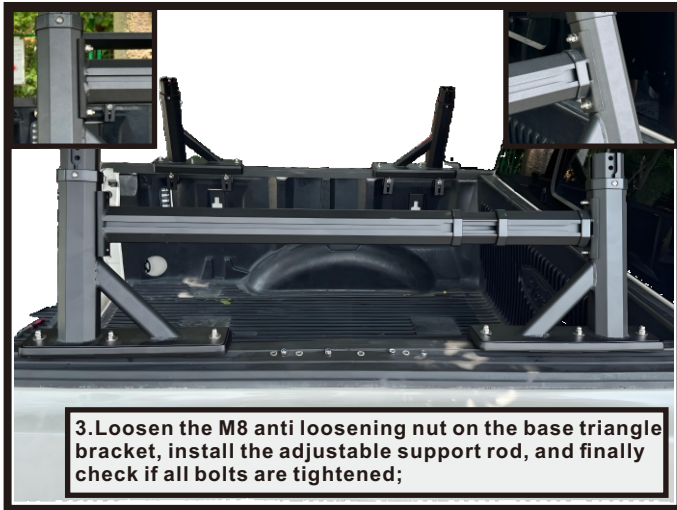

Step 4: Installation steps of Crossbar


Need to use **#3 Crossbar base accessory kit**

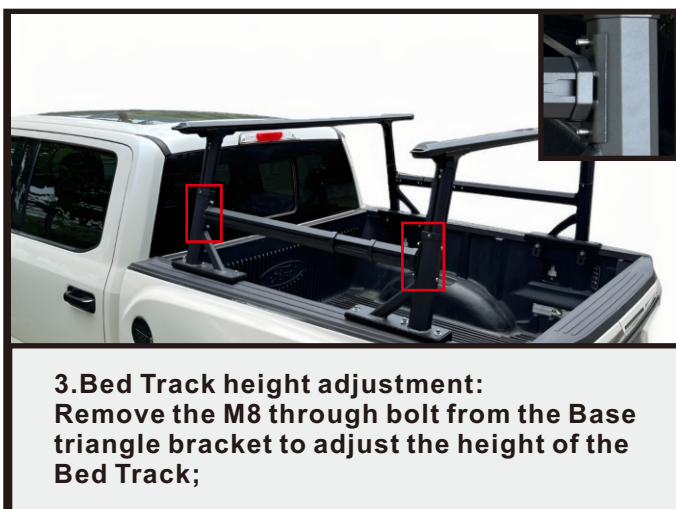

The product can install Truck with roller lid or track groove style


Installation of roller lid Models: need to use #1 Base bracket accessory kit

1. Slide 3 **M8*35 T-bolt (LB No.3)** into the roller lid groove track;

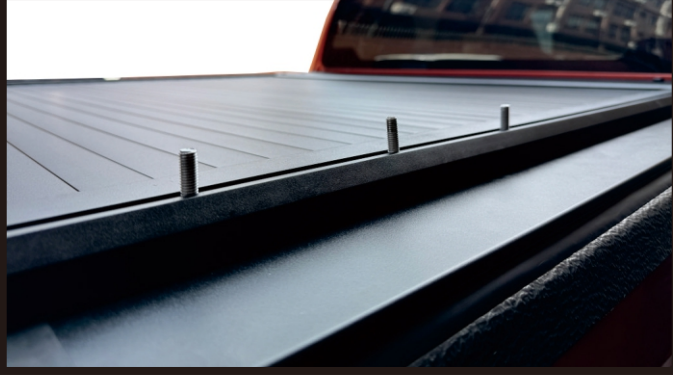

2. Install the **Base bracket rubber (LA No.4)** at the bottom of the **Base bracket (LA No.3)**;

3. Install the Base bracket onto the roller lid
Repeat the above steps and install the base bracket on the other side in sequence;

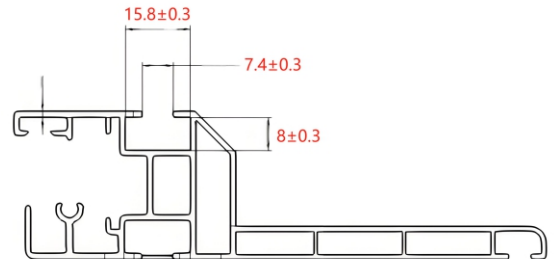

Before installation, please confirm if the bolt groove on the roller lid is compatible with **M8*35 T-bolt**

Installation of T-track models:

need to use :

**#1 Base bracket accessory kit and
#2 U-shaped bracket accessory kit and
#5 Guide rail groove accessory kit**




Remove the plastic cover from the track groove




1. Slide **M8 * 40 T-bolt (LB No.13)** into the truck bed track groove;

Installation of Truck bed rack

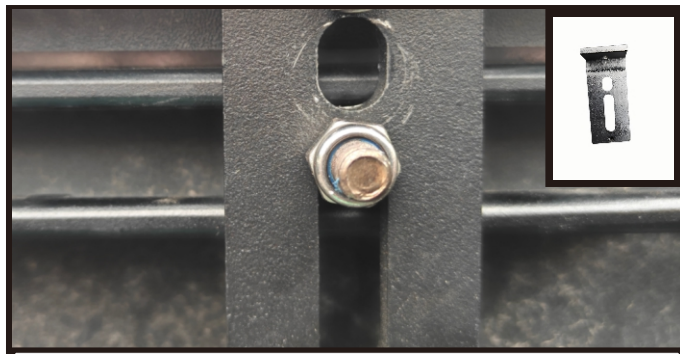





2. Install 2 **U-shaped brackets (LA No.6)**, remove them, install them on **M8 * 40 T-bolts**, and fix them with **M8 anti M8 Nylock Nut (LB No.14)**;

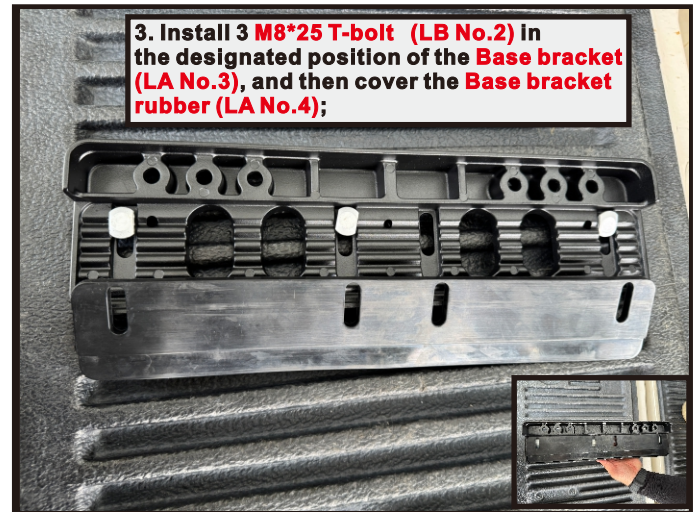

3. Install 3 **M8*25 T-bolt (LB No.2)** in the designated position of the **Base bracket (LA No.3)**, and then cover the **Base bracket rubber (LA No.4)**;



4. Install 2 **M8*30 Round hex bolt (LB No.7)** into the base bracket hole and connect it to the top bolt hole of the U-shape bracket. Finally, fix it with **M8 hex nut (LB No.8)**;

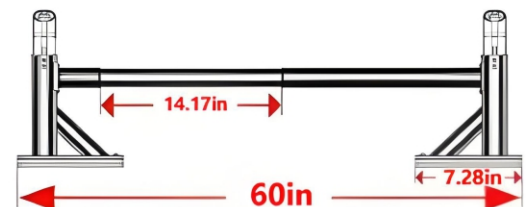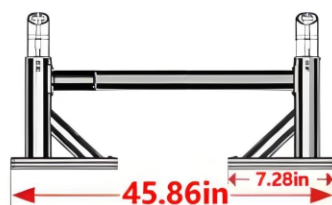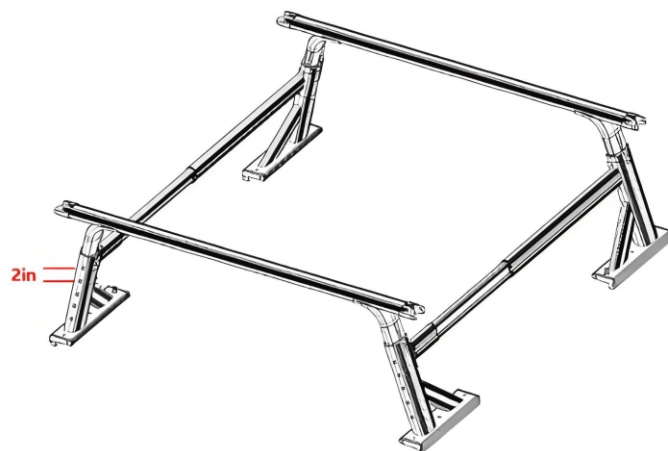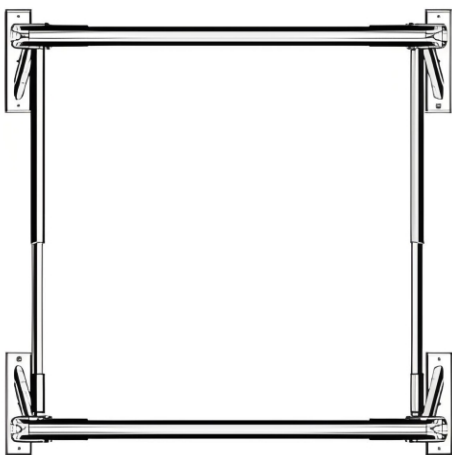

Display

