


FITTING INSTRUCTIONS

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

BONNET GUARD BYD SHARK6


1. Open the Bonnet and fit the Bonnet Guard in place ensuring that it is centrally located. Note the holes in the Bonnet Guard lining up with the holes in the Bonnet.

2. Insert the small plastic grommet in the slotted outside holes in the underside of the Bonnet as shown in diagram "B". Use the foam tape to hold smaller grommets in position. Bigger grommet is for the middle hole.

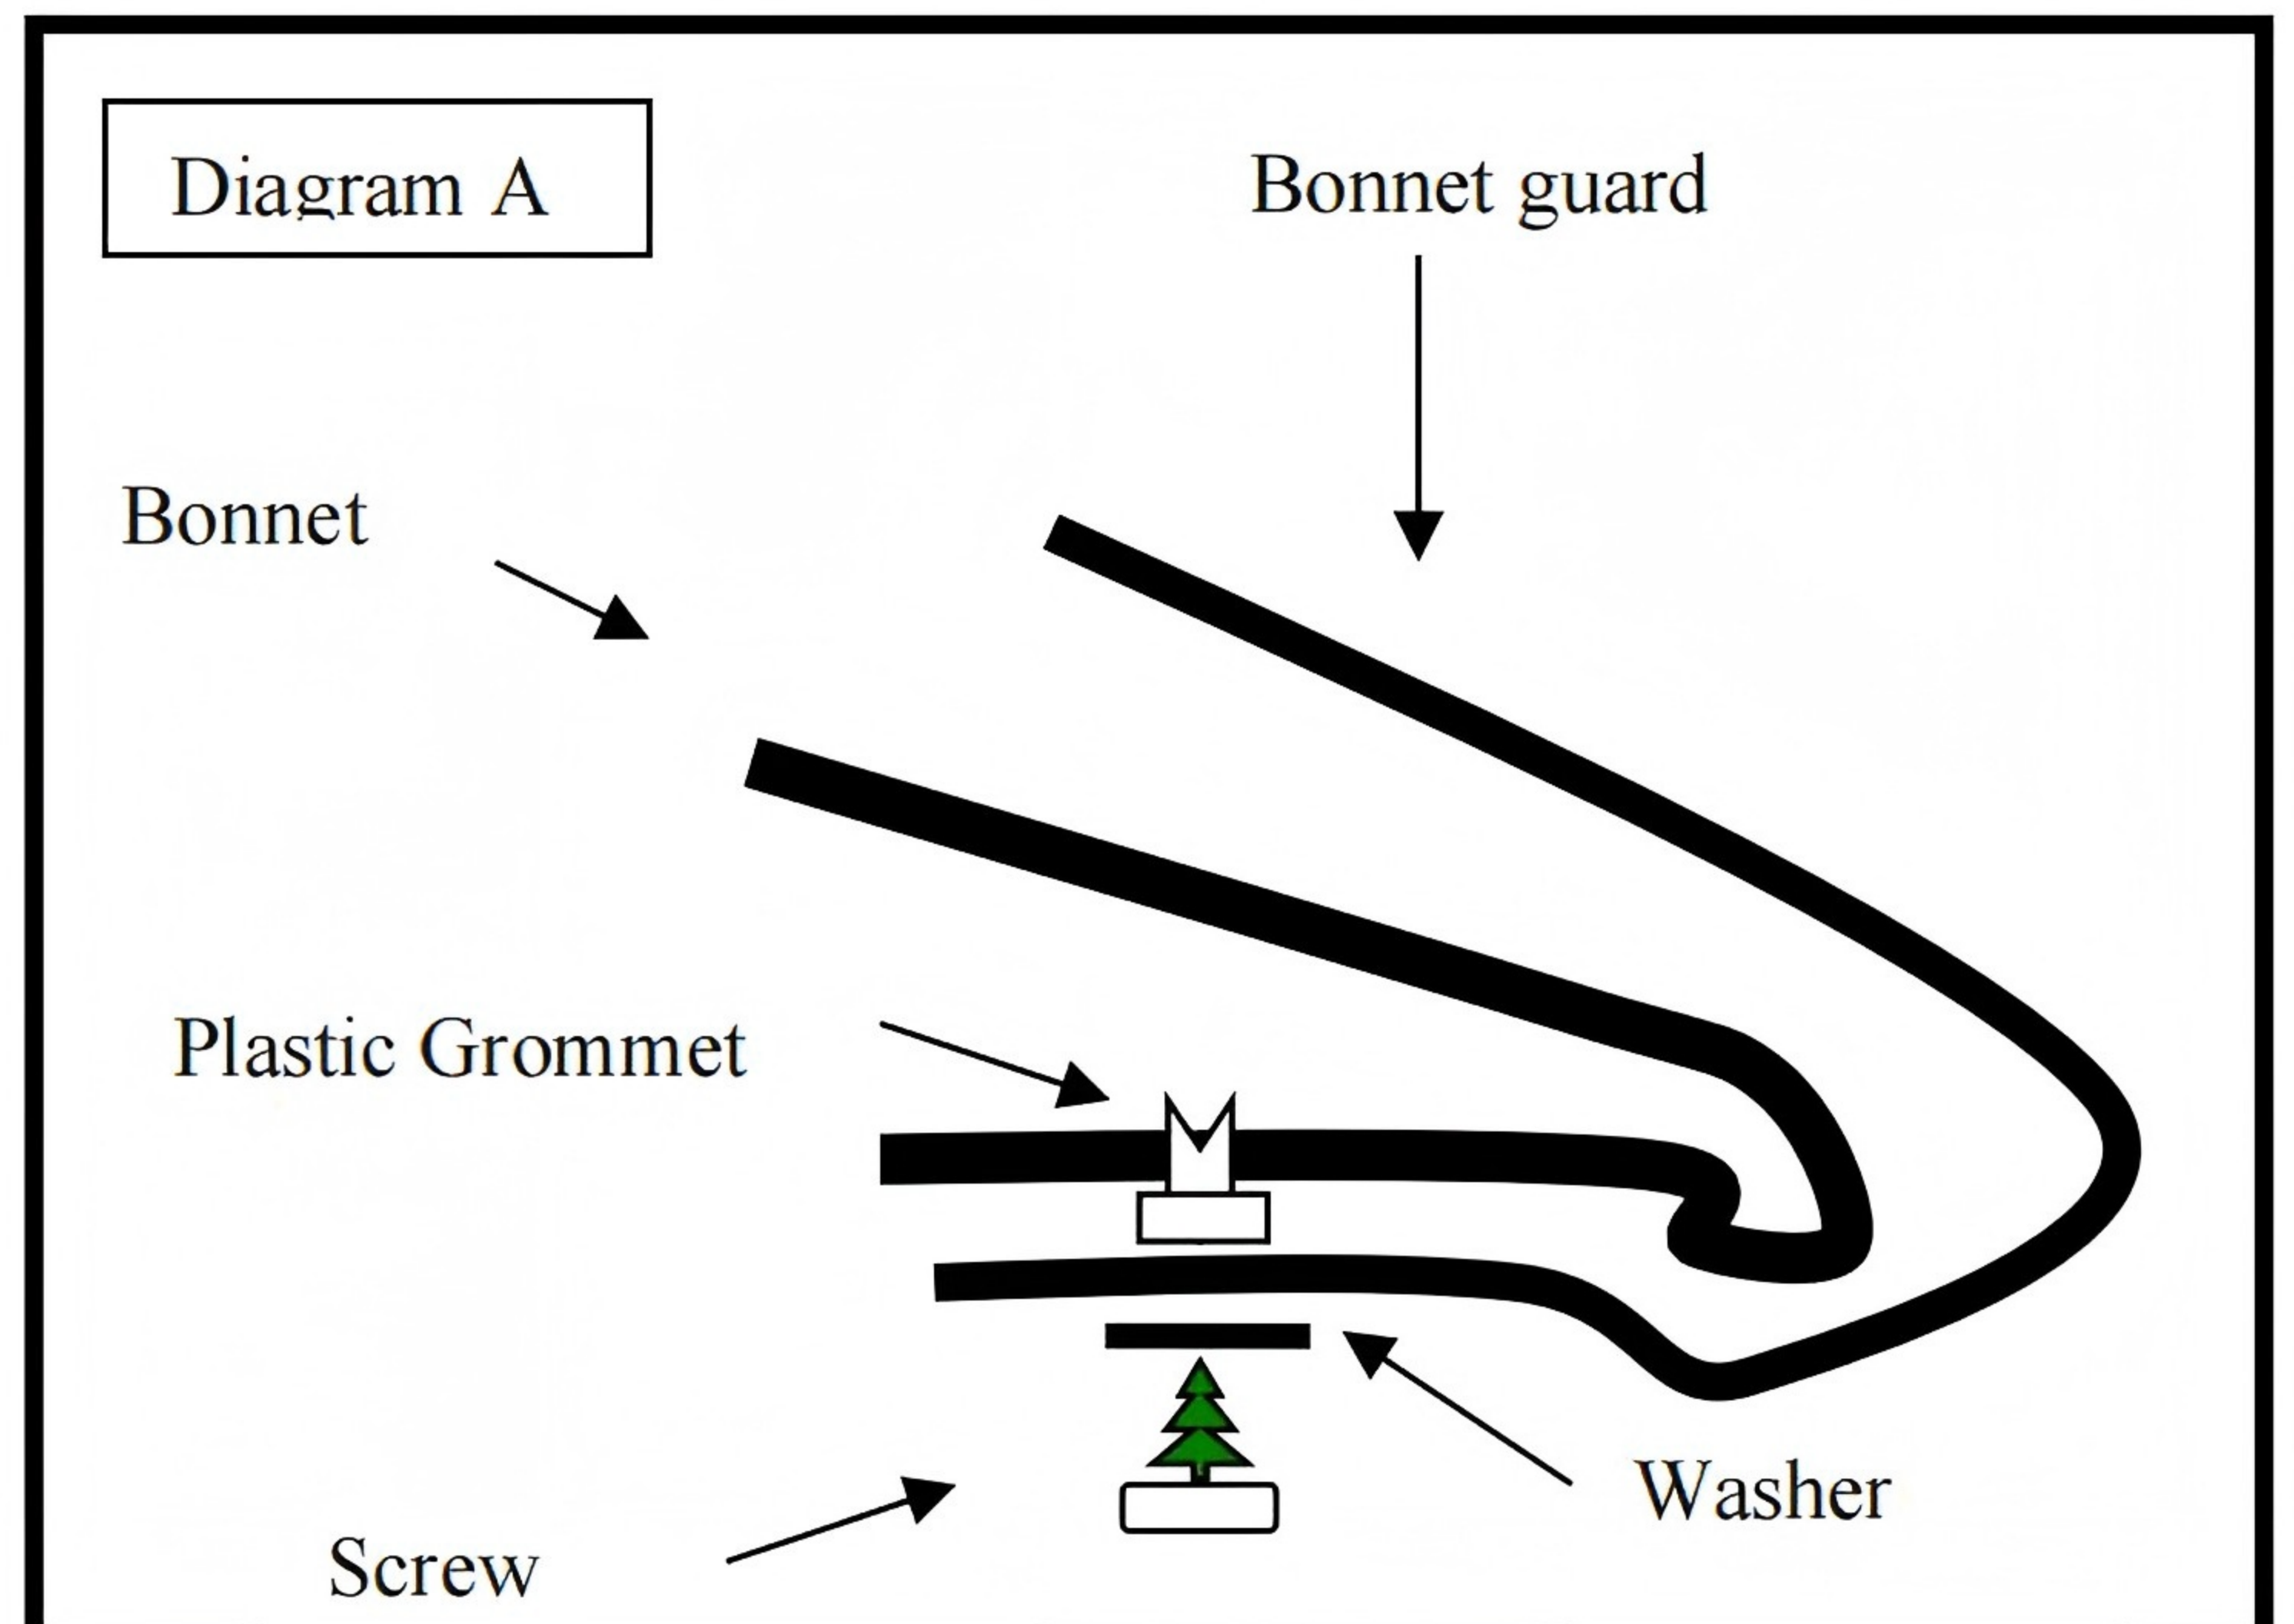


3. Firmly fasten using screws provided. As shown in diagram "A"

4. Apply the 2 supplied anti-abrasive tape to the edge of the Bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. (Cleanse the area with the supplied Alcohol wipes first)

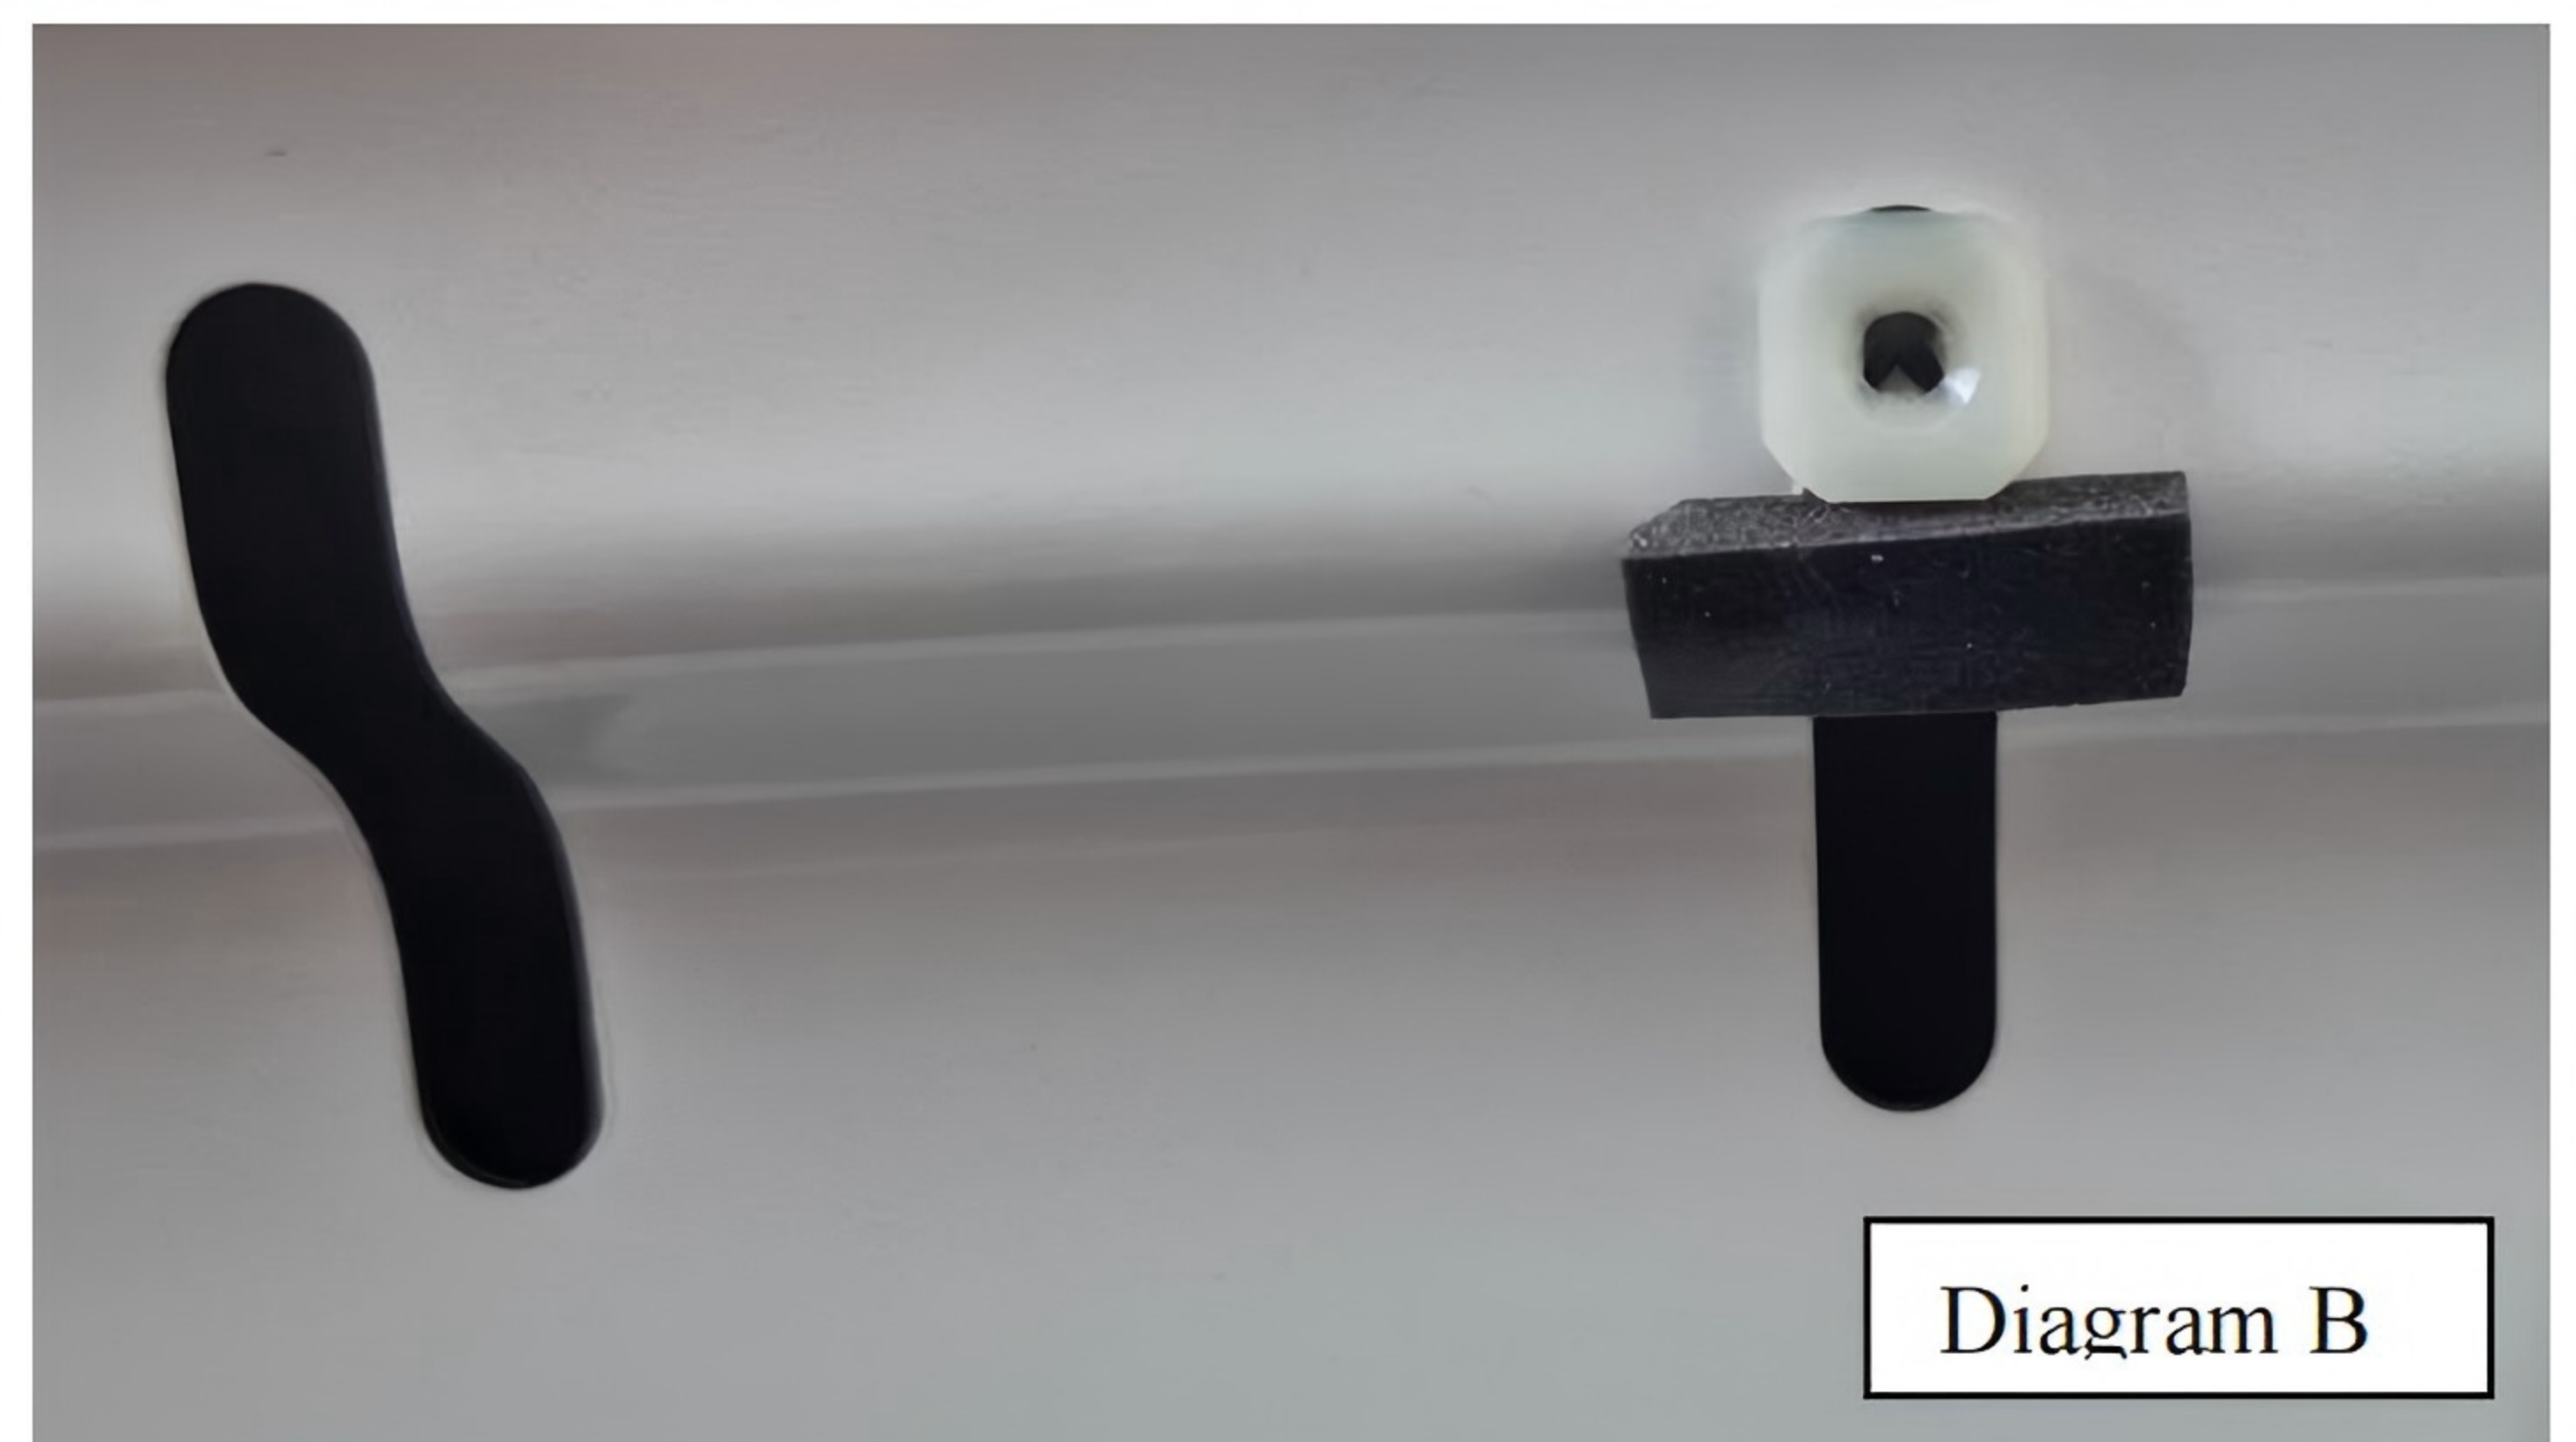

5. Snap the 2 plastic clips into hole positions on Bonnet Guard, over the anti-abrasive tape. As shown in diagram "C"

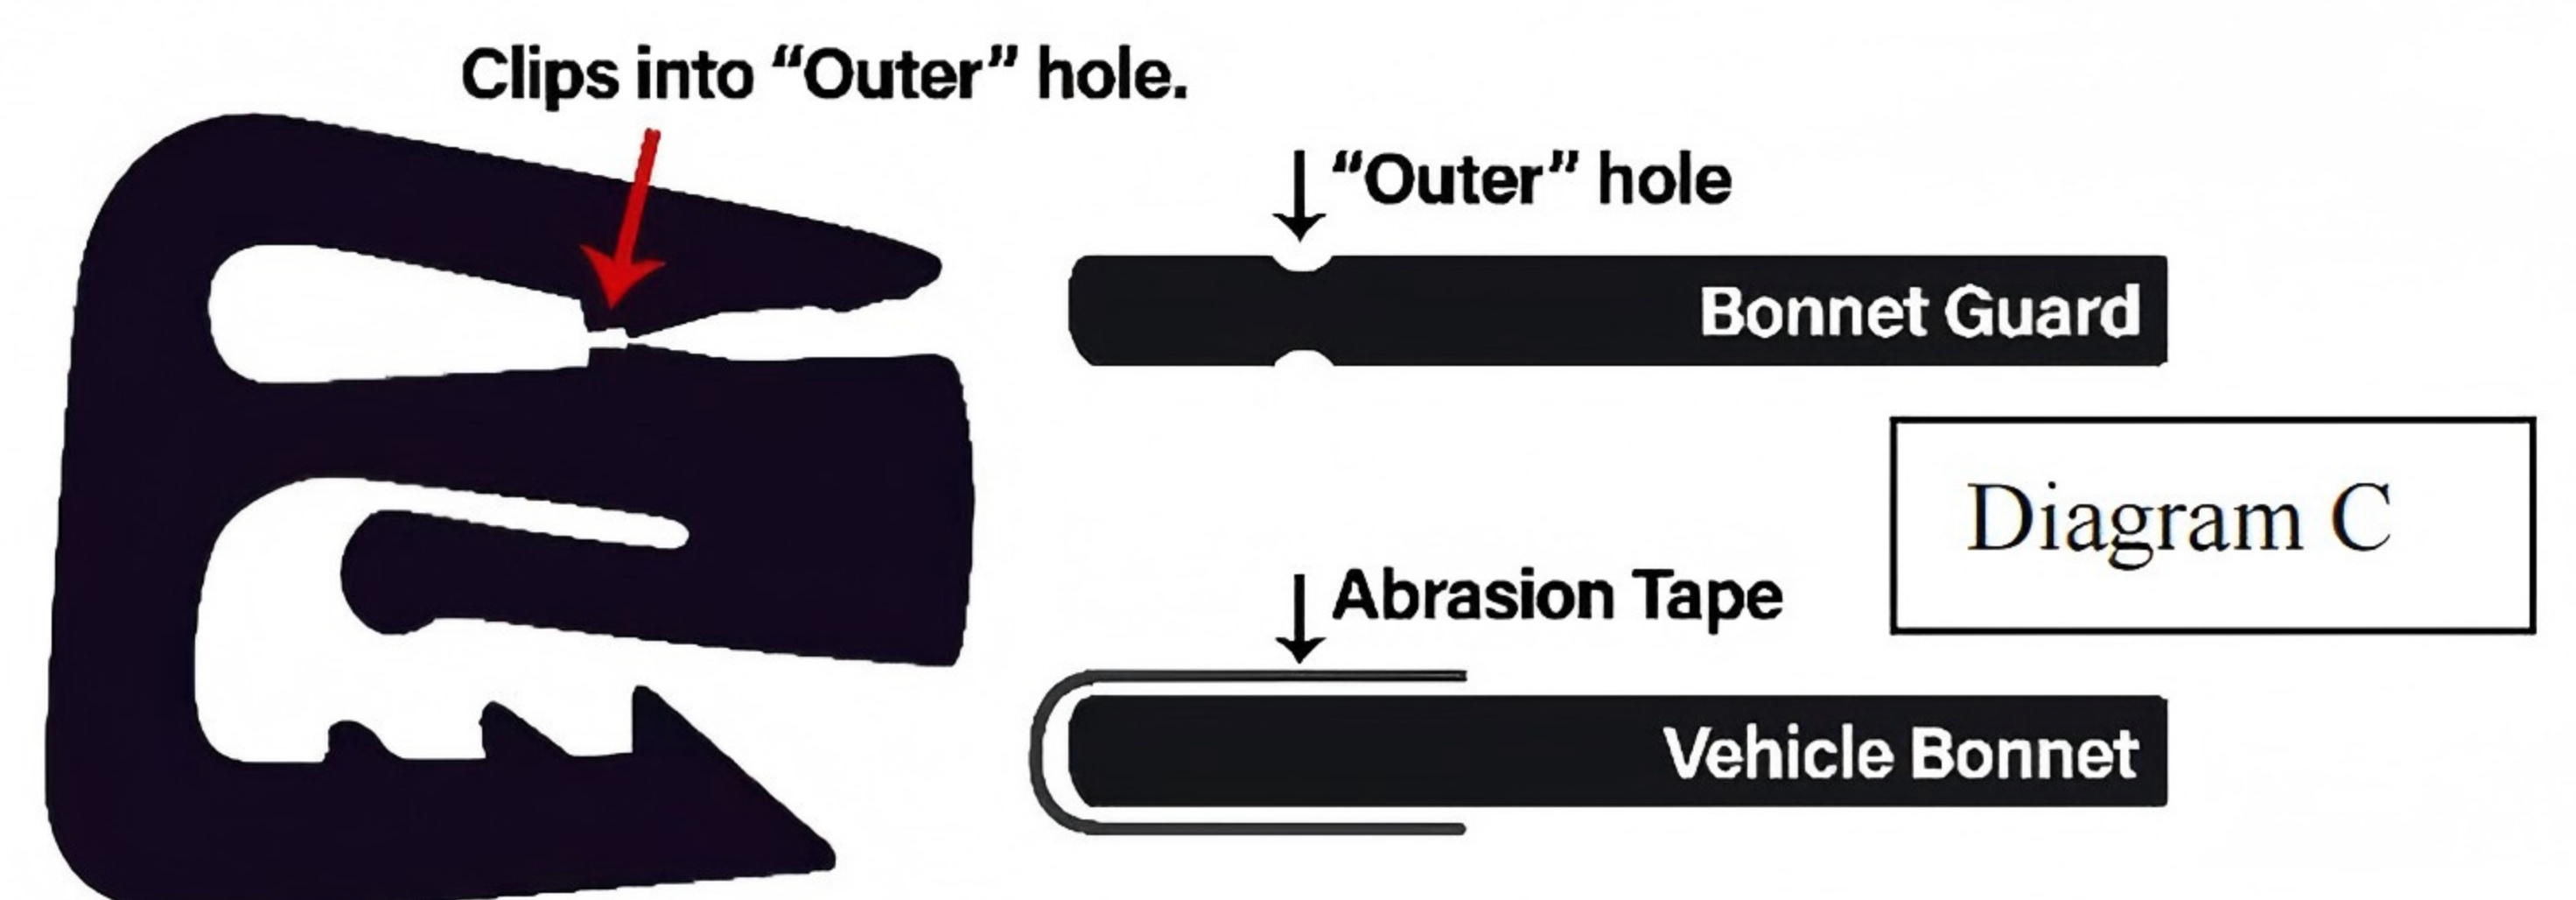

Some vehicles will have a "rubber weatherstrip" attached to the underside of bonnet. If so, insert the bonnet guard between the bonnet and the weatherstrip.

*CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.*