

# Acrylic Nosecone Protector Fitting Instruction



Est. Fitting Time: 20 mins

## Parts Supplied:

Item	Qty	Description	Item	Qty	Description
A	1	Nosecone Protector	F	1	Large Abrasion Resistant Strip
B	2	Metal Clip	G	6	Small Abrasion Resistant Tape
C	2	Nutsert	H	2	Medium Abrasion Resistant Tape
D	2	Screw	I	1	Alcohol Wipe
E	2	Washer			



A



B




C



D



E

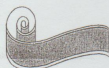

F



G



H



I

## Care Instructions:



Do not slam bonnet.



Clean with a mild detergent and water solution.




Do not use automatic car wash.




Do not use abrasive cleaners.

1.

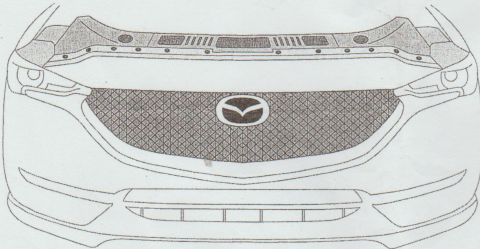

Open the bonnet and thoroughly clean and dry the front fascia and surrounding areas.

2.

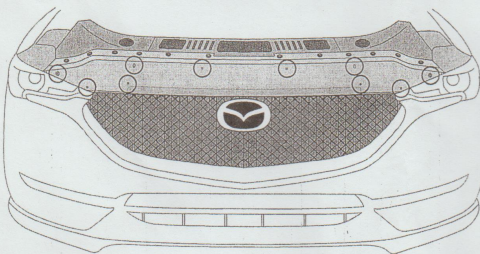


Try fit the Nose Cone Protector centrally onto the front fascia. With a non-permanent felt pen or pencil, mark the positions of the two scrivenets that correspond to the two slots in the Nose Cone Protector.

Note and mark the locations of the six bumpun locations and the two Dual Lock positions at the ends of the part.

Also note the location of the acrylic tag on the bottom of the part and where it locates under the nosecone.

Remove Nose Cone Protector.


3.

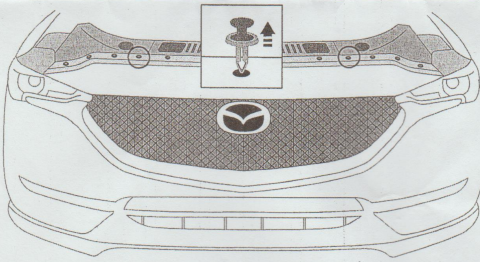

Using a flathead screwdriver, remove the two noted scrivenets from the top of the fascia.


**IMPORTANT: Retain scrivenets do not discard.**

4.

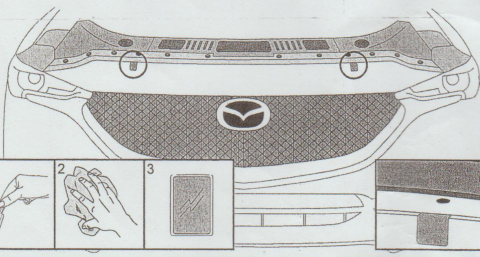


Clean the two previously noted clip positions with the alcohol wipe provided. Wipe off any residue with a clean, dry cloth. Adhere the medium abrasion resistant tape strips to the front of the fascia.

5.

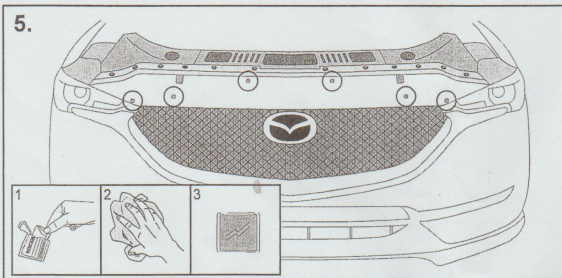


Clean the six previously noted bumper positions with the alcohol wipe provided. Wipe off any residue with a clean, dry cloth. Adhere the small abrasion resistant tapes to the front of the facia.

6.

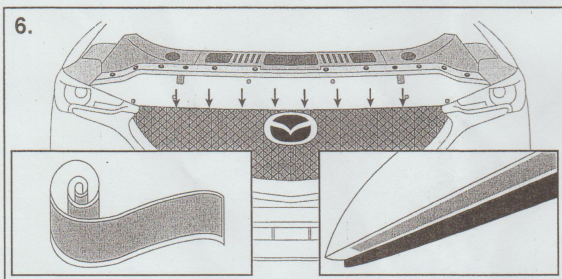

Clean the previously noted long acrylic tag position with the alcohol wipe provided. Wipe off any residue with a clean, dry cloth. Adhere the large abrasion resistant tape strip to the underside of the grille lip at the acrylic tag position.


7.

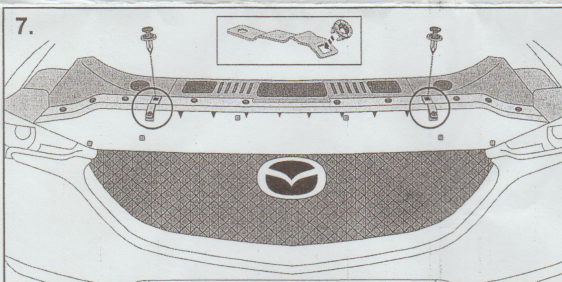

Fit the nut inserts into the square slots of the short metal clips. Align the holes in the short metal clips with the holes in the top of the facia. Push the two previously removed screws through the holes in the clips into the top of the facia.

**IMPORTANT:** Ensure the clips rest over the abrasive resistant tape and do not come in contact with bonnet paint work. Failure to do this may result in permanent paint damage.


8.

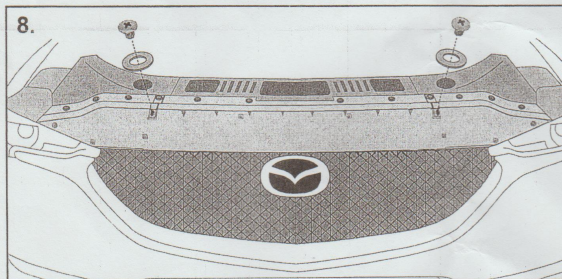


Re-fit the Nose Cone Protector. Fasten the Nose Cone Protector with the screws and small washers provided.

**IMPORTANT:** DO NOT OVER-TIGHTEN SCREWS

**IMPORTANT:** Ensure that the metal clips are positioned over the abrasion resistant tape and do not come into direct contact with the facia.

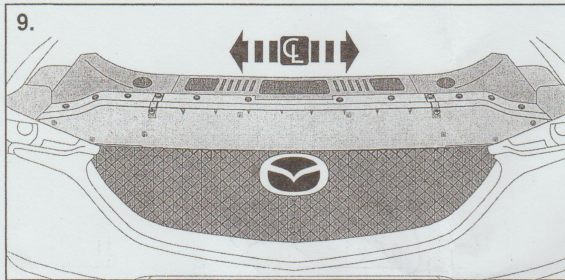

Check alignment of Nose Cone Protector. If alignment is required, loosen the screws, realign Nose Cone Protector and then re-tighten the two screws.

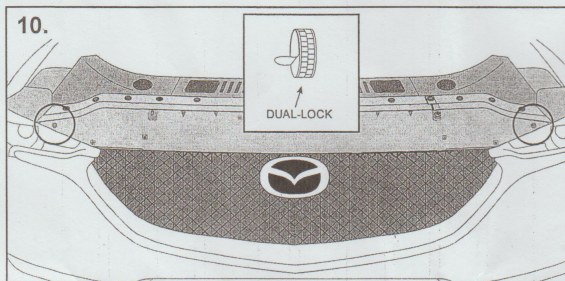

Remove the protective liner from the dual-lock discs.

Apply firm downward pressure over the dual-lock discs.

**TO REMOVE:** Reverse the above procedures.

Please place the Fitting Instructions in the glove box after installation is completed.