

FITTING INSTRUCTIONS FIT993


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

SSANGYONG REXTON 4

P/N BG583


1. Clean and open bonnet.

2. Fit Bonnet Guard in position, easing the Bonnet Guard tabs between the rubber weather-strip and the bonnet. -being careful not to pull on the rubber weather-strip too hard.

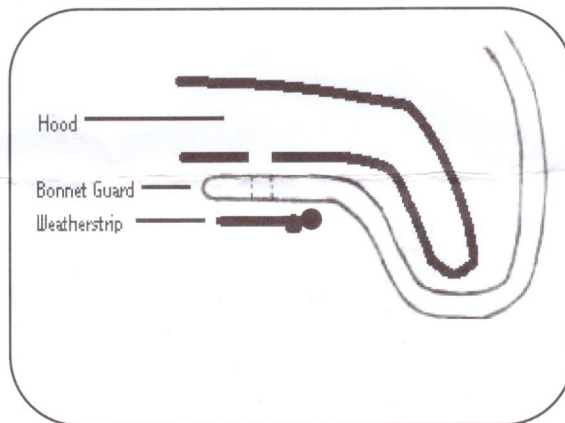

3. Fit the plastic "W" clips to the holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard.

Use the supplied alcohol prep-pads to cleanse the area first.

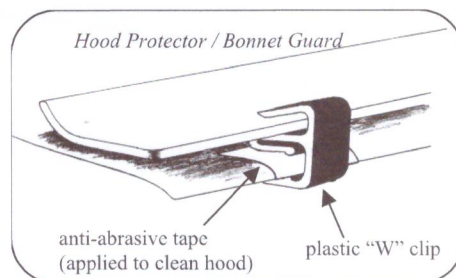

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.