
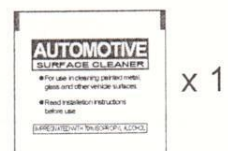




Place these instructions in the vehicle's glove box after installation is complete.

Please read these instructions carefully prior to installation.
Please refer to your fitting instruction to ensure that the product is installed in the correct location.
Check the contents of kit before commencing fitment and report any discrepancies.

Parts Supplied:

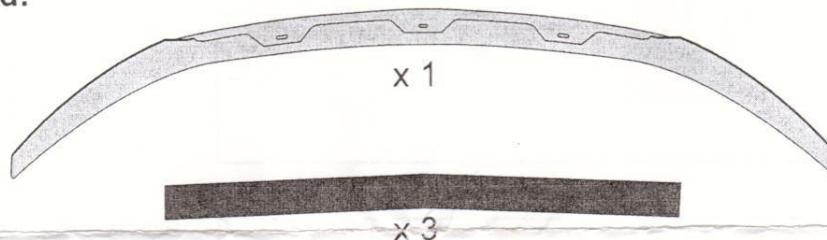


Tools Required:




General Care:




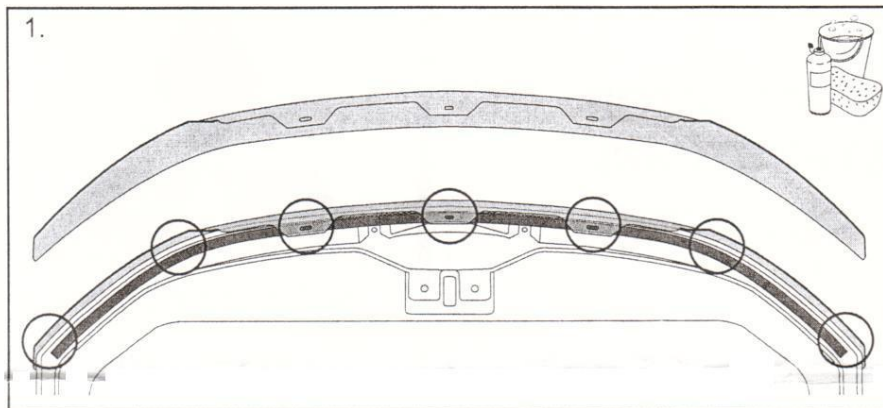


Trial fit the Bonnet Protector centrally onto the bonnet. With a non-permanent marker or pencil, note the positions of the acrylic tags and the three centre slots in the Bonnet Protector that correspond with the rubber extrusion. Also note and mark the four metal wing clip locations.

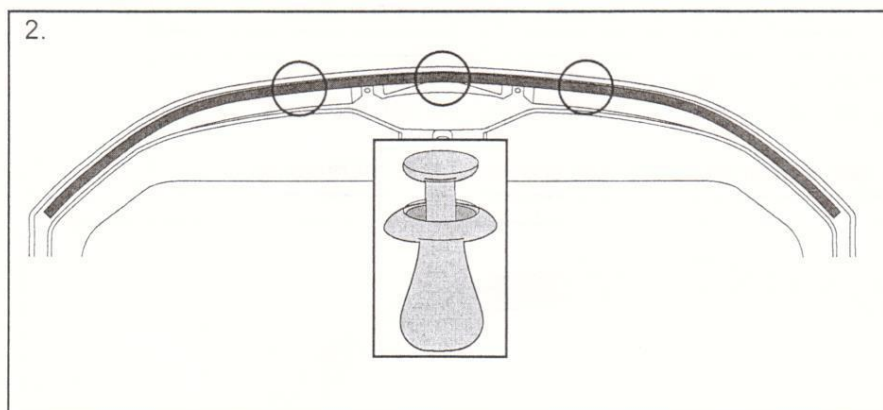

Pull the rubber extrusion off the hidden plugs, remove the three exposed plugs and discard.

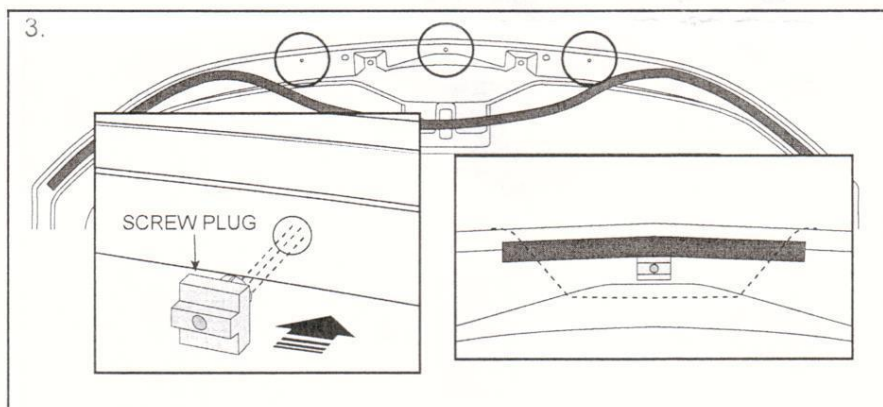


Insert the screw plugs provided into the three vacant holes. Then apply the foam tape centrally above the three screw plugs. The foam tape should extend approximately 10mm either side of the acrylic tag..

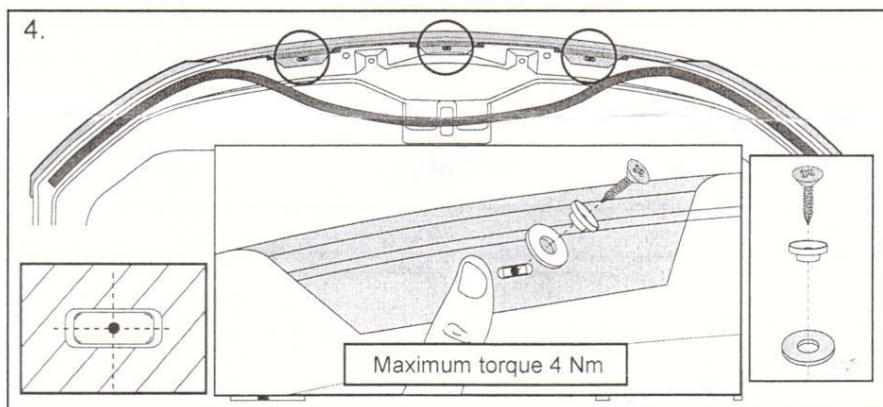

Re-install the Bonnet Protector, ensuring that the collar of the screw plugs locate into the slots in the Bonnet Protector tags, in the orientation shown. Insert the three self-tapping screws through the plastic screw cap, and metal washers into the screw plugs, but do not fully tighten. Ensure the Bonnet Protector is centrally located on the bonnet, then fully tighten the three screws. **DO NOT OVERTIGHTEN.**


5.

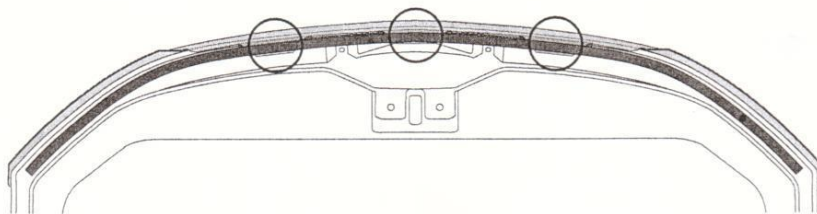

Stretch the existing holes in the rubber extrusion over the plastic screw caps.


Important: Ensure rubber extrusion is fully seated over the plastic screw caps.

6.

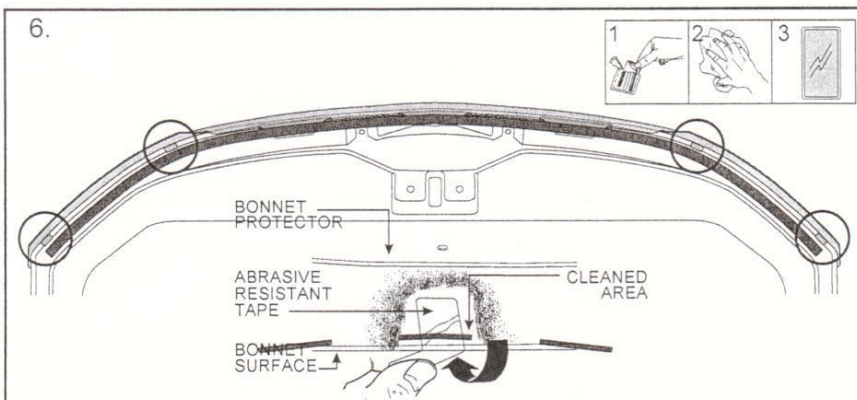

Clean the noted areas under the wing clip locations with the alcohol wipe provided. Wipe off any residue with a clean, dry cloth. Adhere the small abrasive resistant tape strips over the bonnet lip. Apply the tape so that approximately half of each strip is on the top surface of the bonnet and half is on the underside.


7.

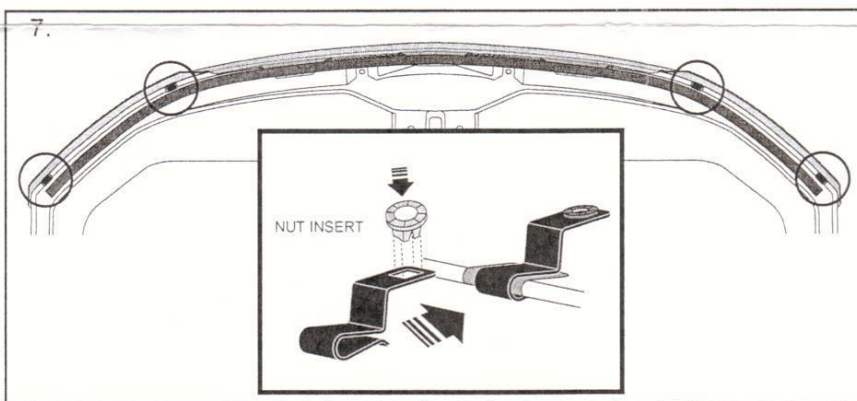

Fit the nut insert into metal wing clips. Slide the metal wing clips over the abrasive resistant tape strips on the bonnet lip.

IMPORTANT: Ensure that the clips are positioned over abrasive resistant tape and do not come in contact with any of the bonnet's paint work. Failure to do this may result in permanent paint damage.

8.

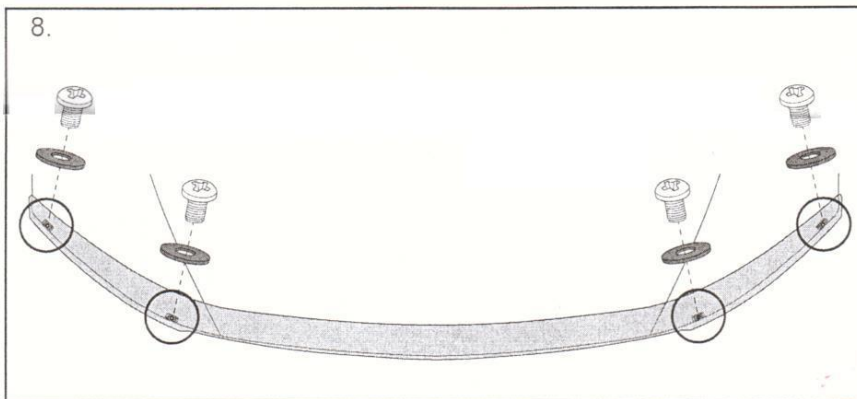

Fasten the Bonnet Protector wings with the screws and small washers provided.

To Remove: Reverse above procedure.

Note: Check tension of part periodically, and tighten screws if required.