

Installation Instruction for Roller Lid











Before Installation

Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.

Please periodically check and retighten all the hardware and clean the investment for a refresh look.


The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

PART LIST

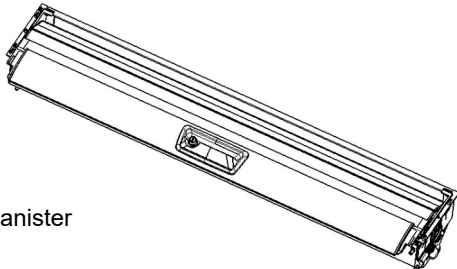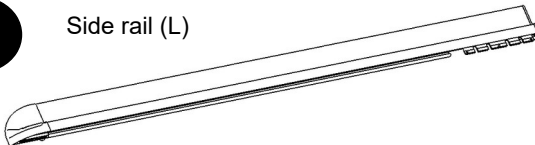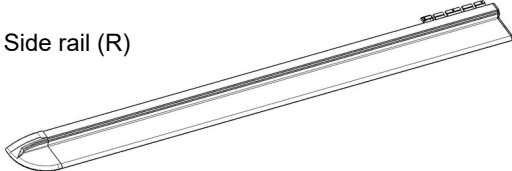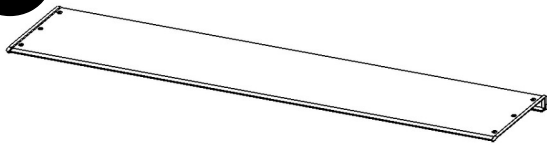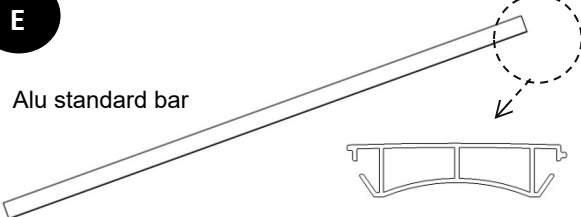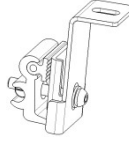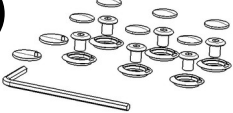
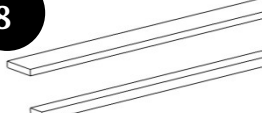
A  Canister	B  Side rail (L) C  Side rail (R)		
D  Cover plate (For canister)	E  Alu standard bar		
1  Accessories for brackets	2  Positioning rubber foam (Tailgate)	3  Clamps Qty: 6	4  Bolts for side rails
5  Accessories for cover plate	6  Drain-pipe for rear part	7  Front Drain-pipe	8  Foam seal
9  End cap for tailgate			



Tools and materials needed

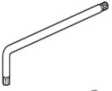


T15, T30

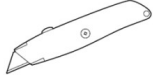


Installation Steps


1. Cleaning the trunk and margin by water X, dismantling the other unnecessary part for clean and tidy.

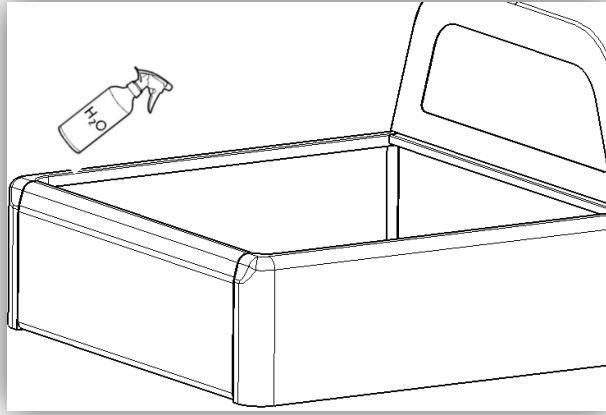

2. Install side rails \ on canister with .

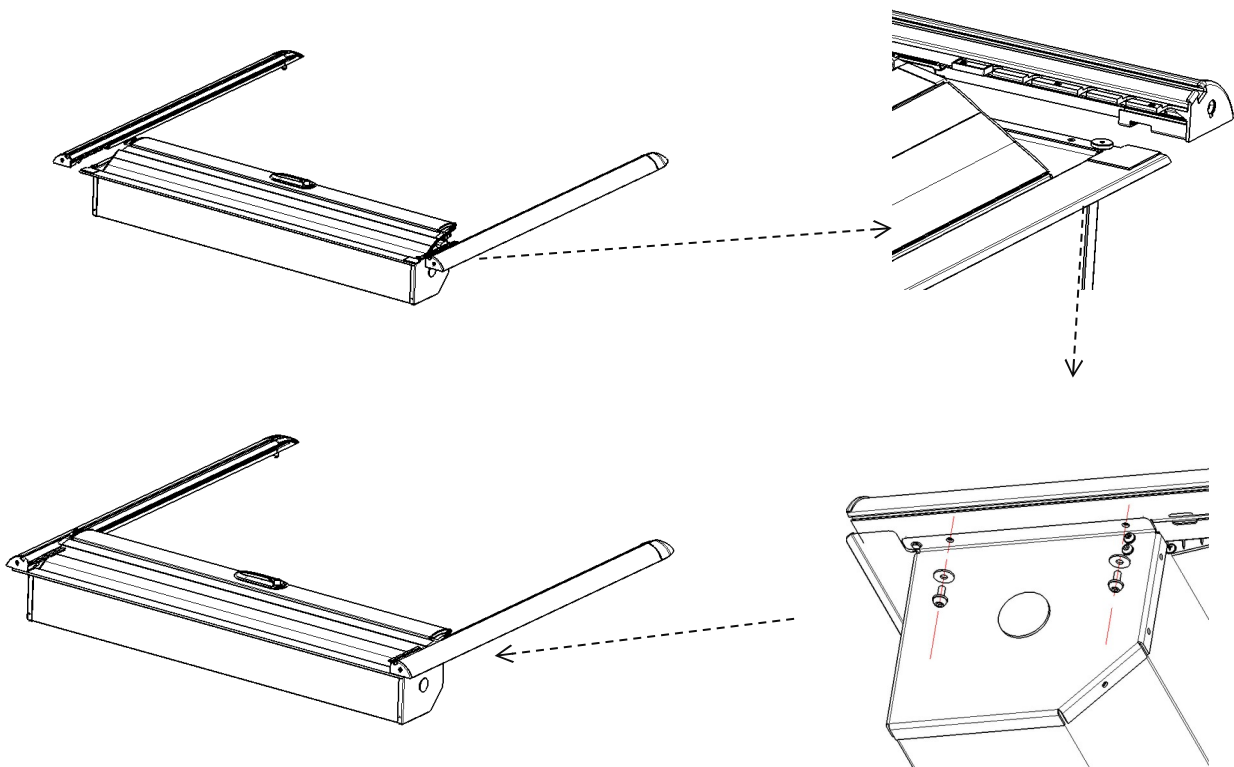


3. Install plate on the side rails with .

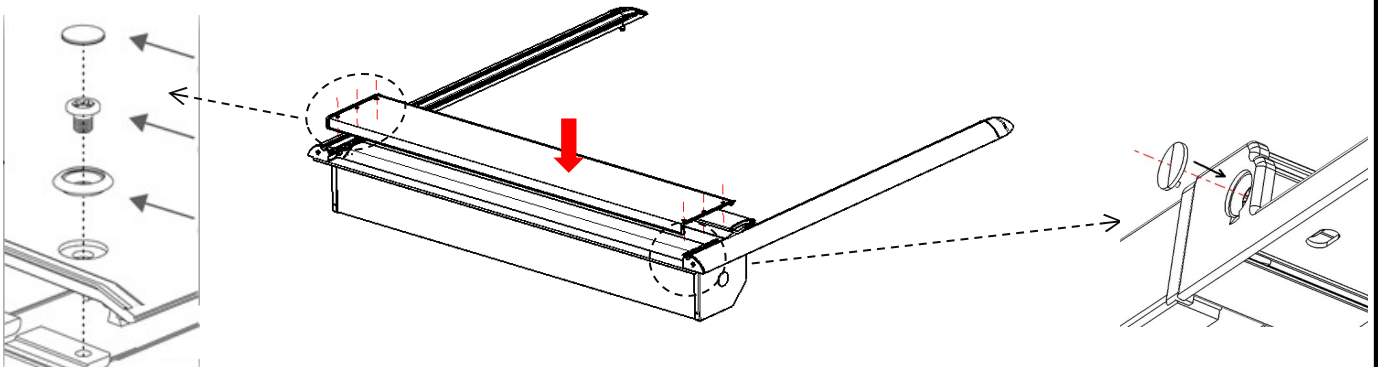


**4. There are four drainage locations needed or this roller top.
The first two are in the front bulkhead where the roller cover canister is placed:**




There should already be drainage holes drilled in the metal frame, but holes will need to be drilled in the plastic lining if they are not already there. The image below shows Where you need to mark for drilling:

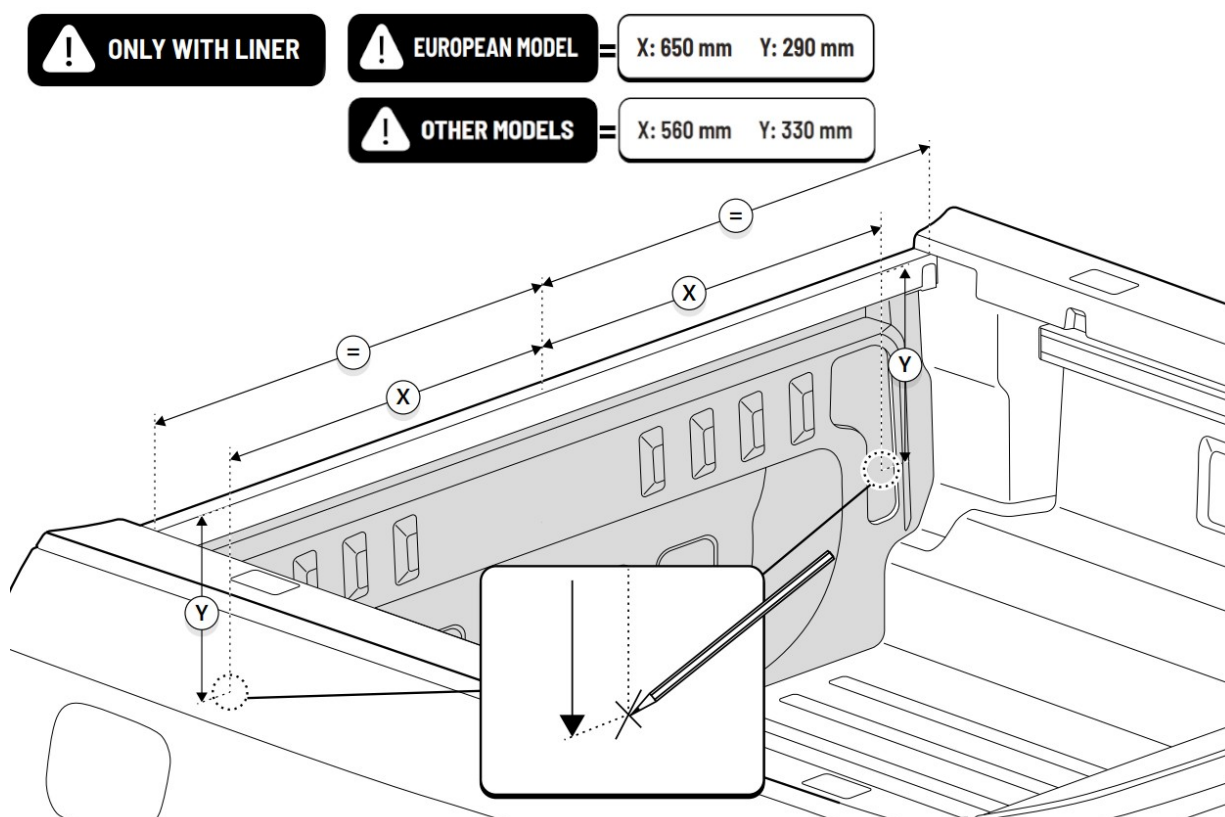


Once you have marked the locations, drill a pilot hole using a 3.5mm drill bit, then make the hole with a 40mm cutting bit, being sure not to drill through the metal under the liner.

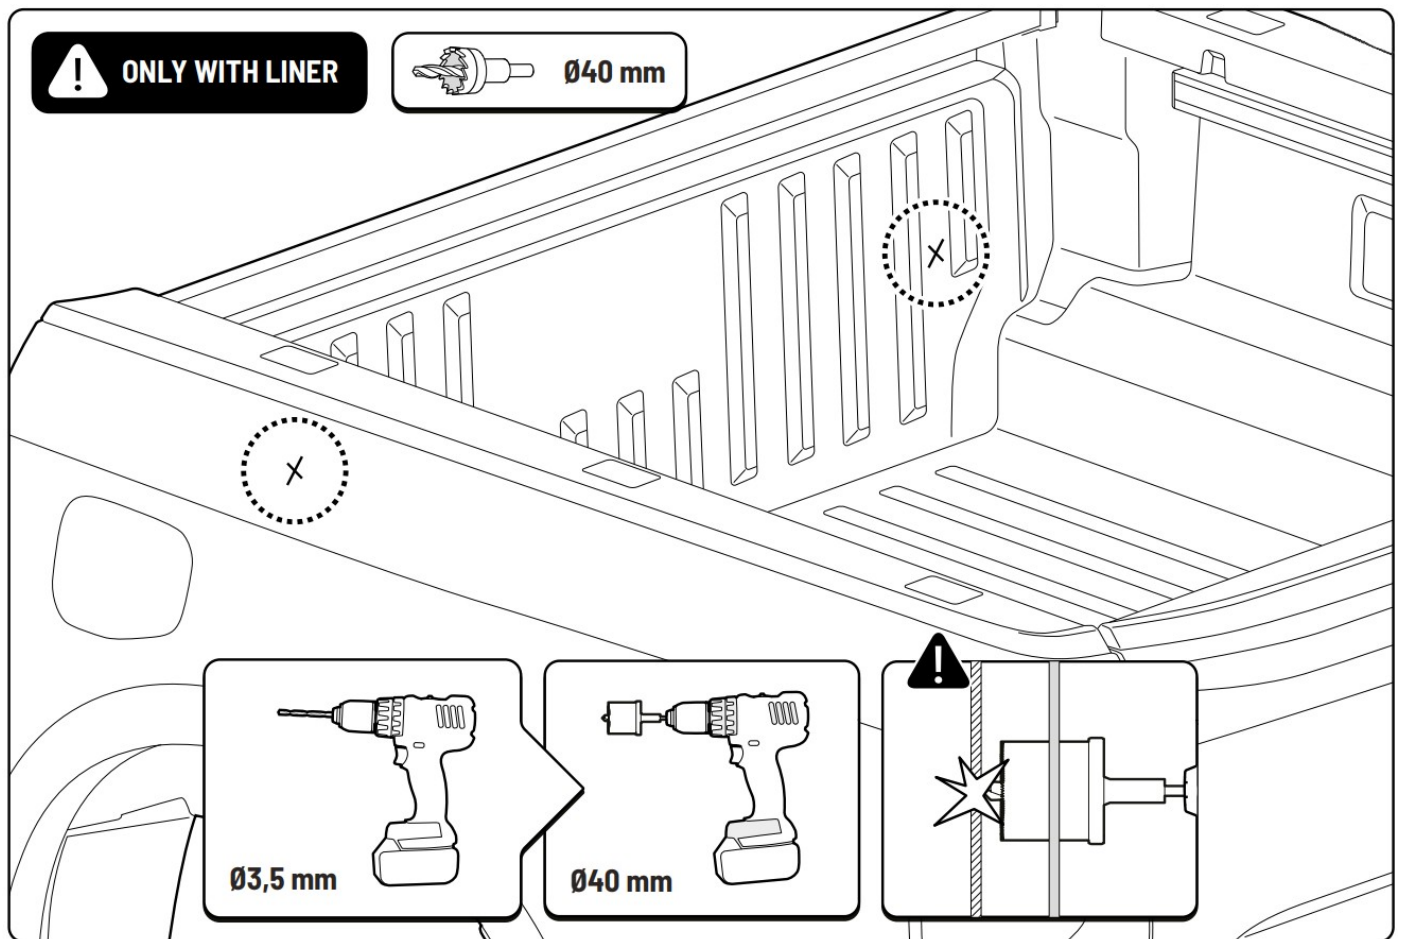


**5. Install the 30mm thickness bulkhead seal , trim the extra part if needed.
Install the drainage ring**

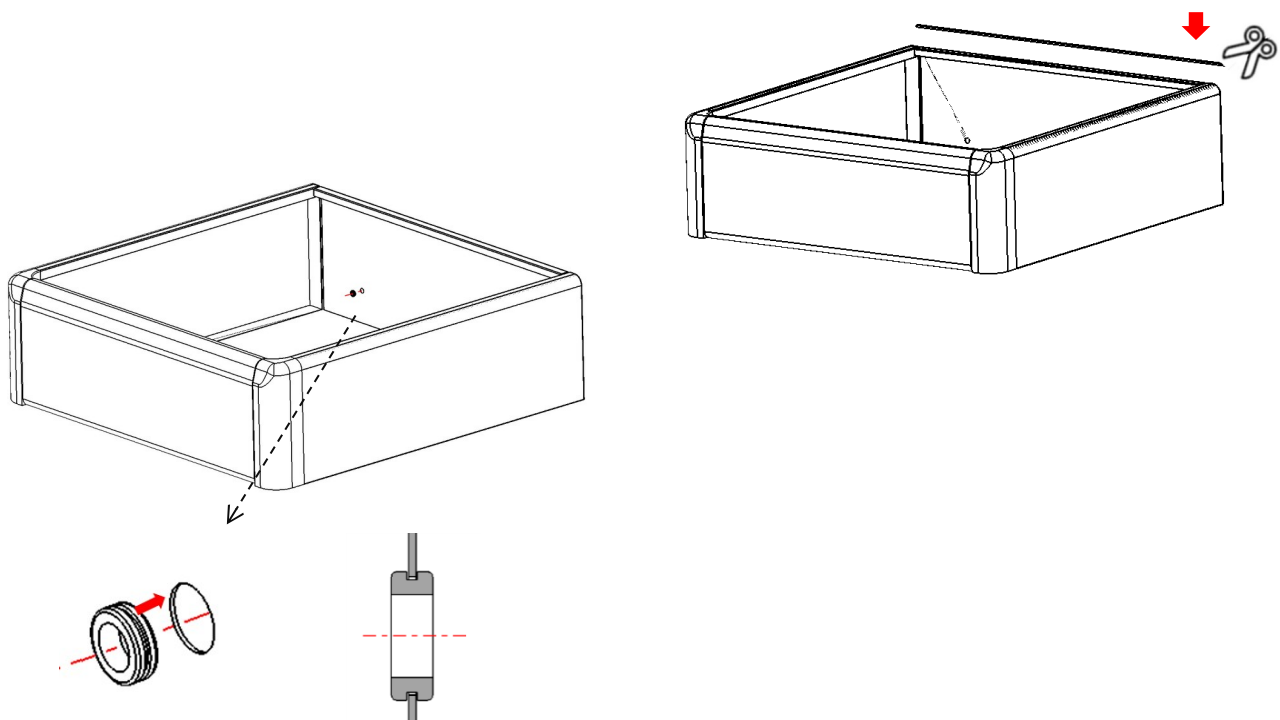


6. Put the roller shutter on the truck bed.

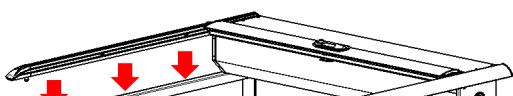


7. Put the rubber foam on the tailgate, as the photo shows above. Close the roller lid and pull it backwards until it touch the rubber foam.

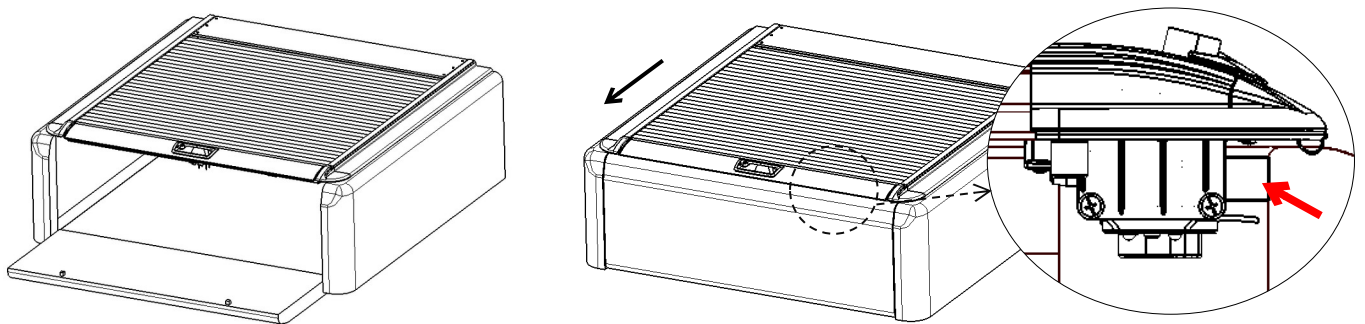

8 . Open the roller lid and put the standard bar to adjust the width between two side rails. Distance between the side rails should be same from front to rear part.


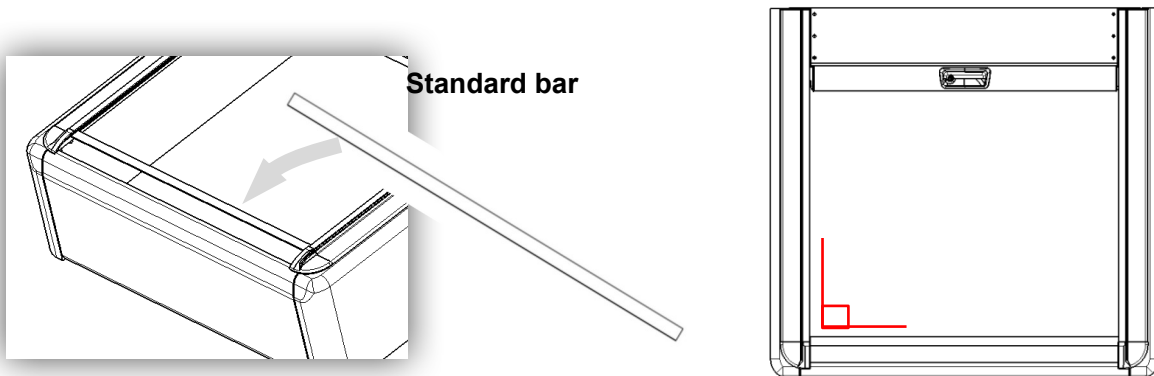


9. As the figure shows, M6 bolt screwed into M6 square nut. Then put the bolts into the side rails, 3 pieces on each side.

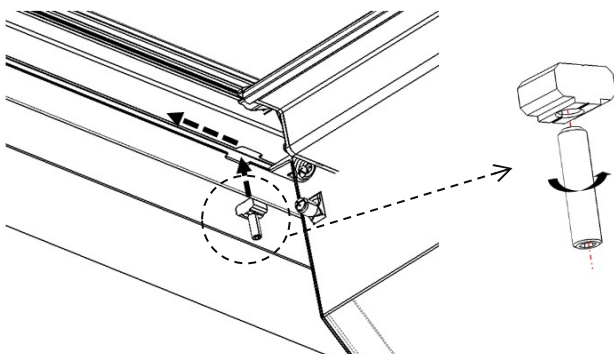


10. Clamps with extra-long bolt should be installed at the front side. (Close to CAB)

The plastic spacer ⑩ is to fill the gap between the clamp and truck bed.

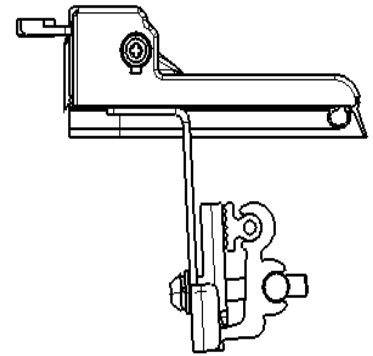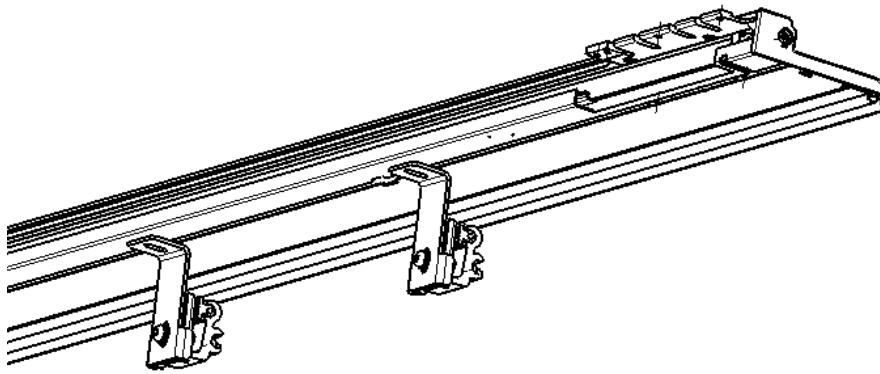




11. Fasten the long bolt below if needed.

Notice: Fasten the long bolt below until the side rail reach horizontal status.

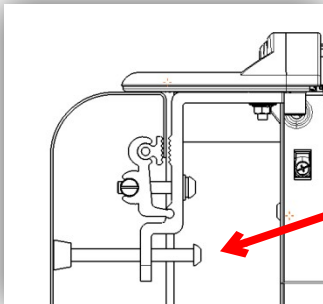

Let side rail keep
horizontal status

12. Install the drain-pipe at the rear part of the tracks. (Both sides should be same)

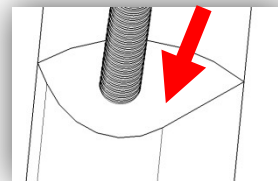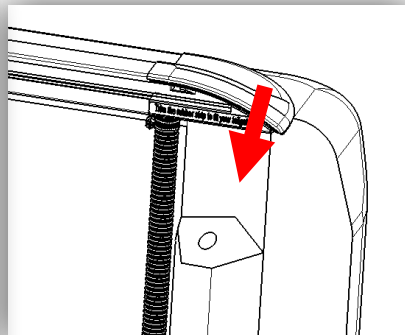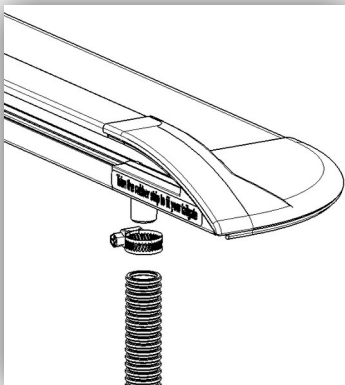

13. Install the end cap on tailgate; fix them with the self-tapping screws. (as the picture shows above).

Assembly way is same on both sides.



14. If the roller shutter do not runs smoothly, you can follow below steps: (as the picture shows)

a. Put some lubricating oil on the track.

