

Installation Instruction for Roller Lid















Before Installation




Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.

Please periodically check and retighten all the hardware and clean the investment for a refresh look.

The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.


PART LIST

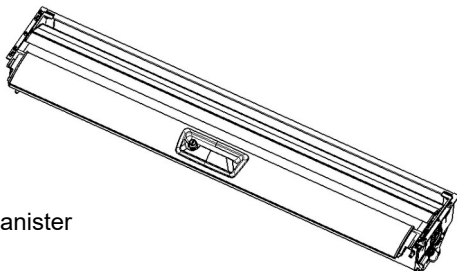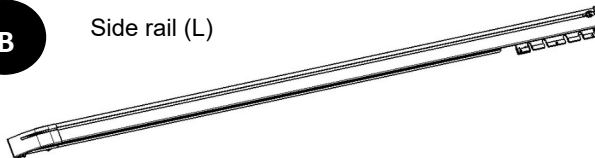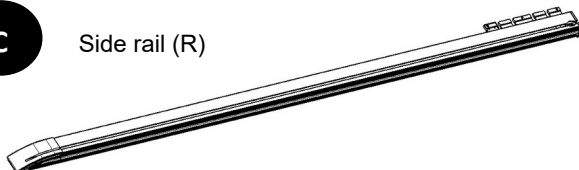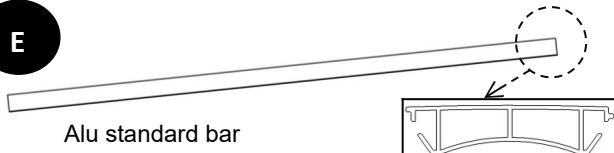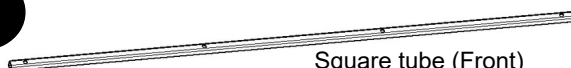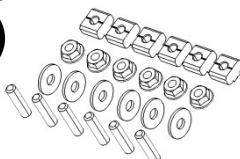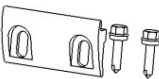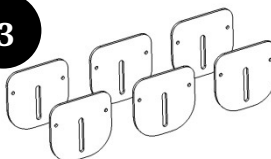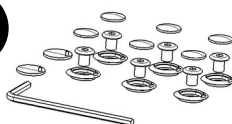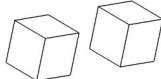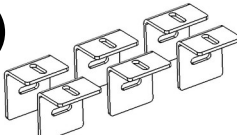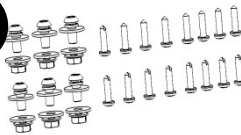A  Canister	B  Side rail (L)	C  Side rail (R)	
D  Cover plate (For canister)	E  Alu standard bar	F  Square tube (Front)	
1  Accessories for brackets	2  Bracket for tailgate lock	3  Bracket 1 for side rail	4  Bolts for side rails
5  Accessories for cover plate	6  Drain-pipe for rear part	7  Drain-pipe for canister	8  Rubber seal
9  Positioning rubber foam (Tailgate)	10  Bracket 2 for side rail 2	11  Bolts for brackets	

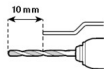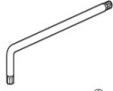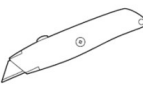
Tools and materials needed					
 10 mm Ø 3,5 mm Ø 30 mm		 T15, T30		 H₂O	

Installation Steps


1. Cleaning the trunk and margin by water X, dismantling the other unnecessary part for clean and tidy.

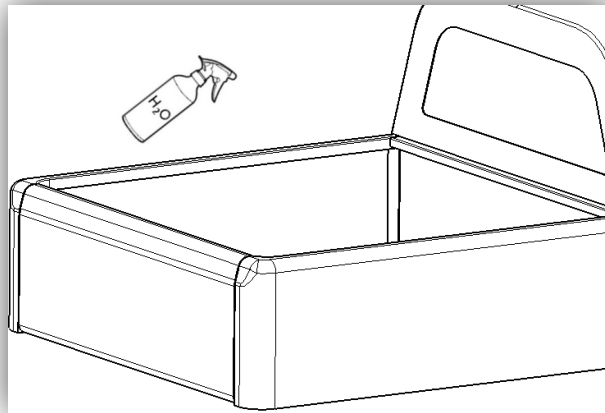


2. Install side rails \ on canister with .

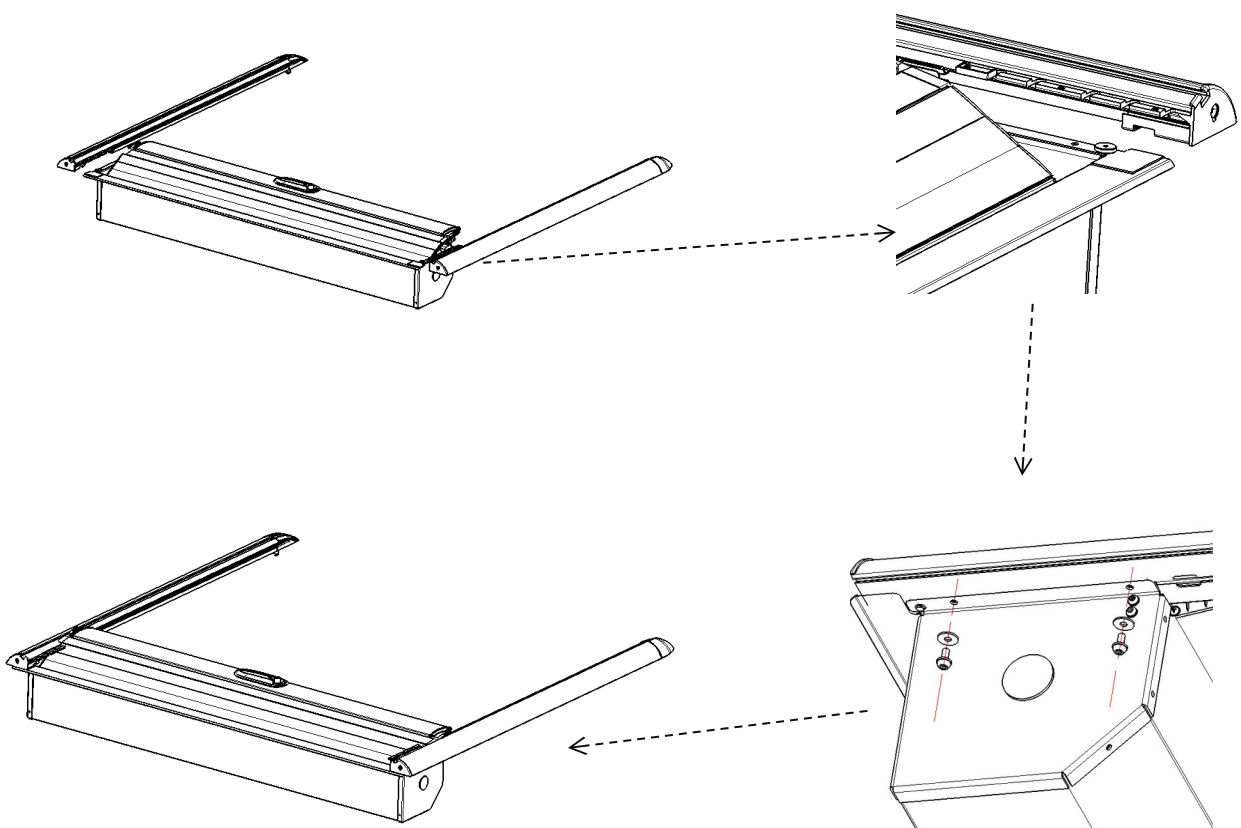


3. Install the drain-pipe , assembly way is same on both sides.

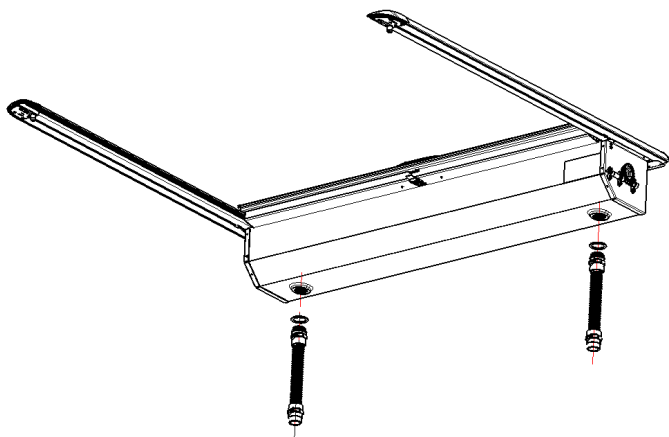


4. Install plate on the side rails with .

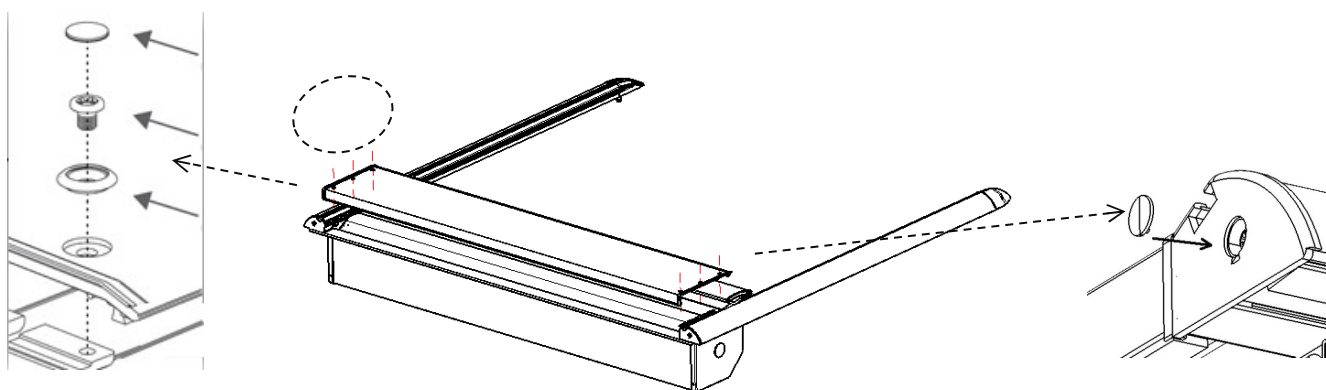


5. Find the two holes on the front of the truck, and then install the drain ring on it.

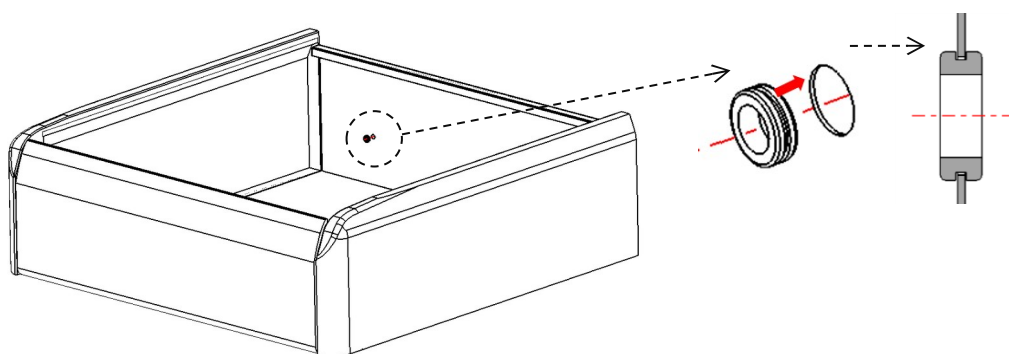


6. Install the bulkhead seal and trim extra the part. Install the square tube on bulkhead with.

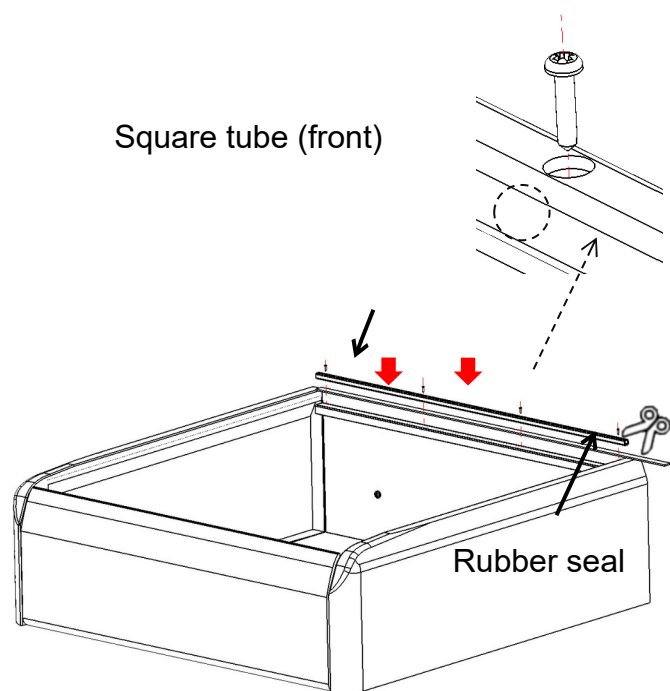


7. Drilling holes to install bracket 1 , and fasten it with . Bracket 1 should be 3 pieces on each side.

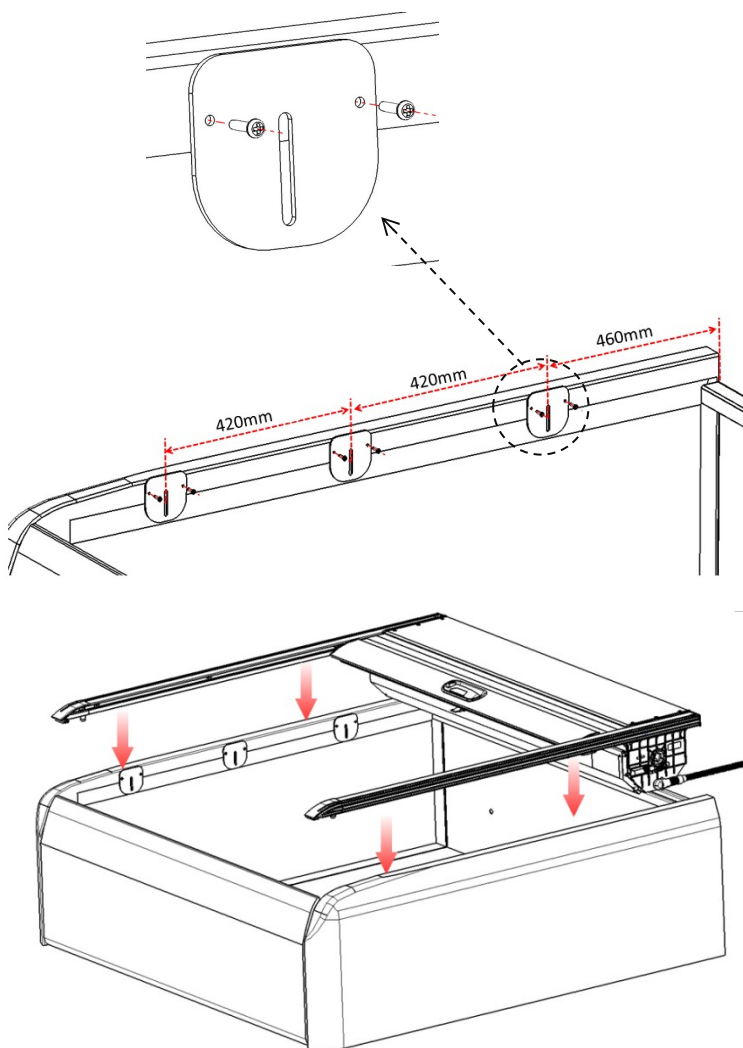


8. Put the roller shutter on the vehicle and threading the drain-pipes through the front holes.

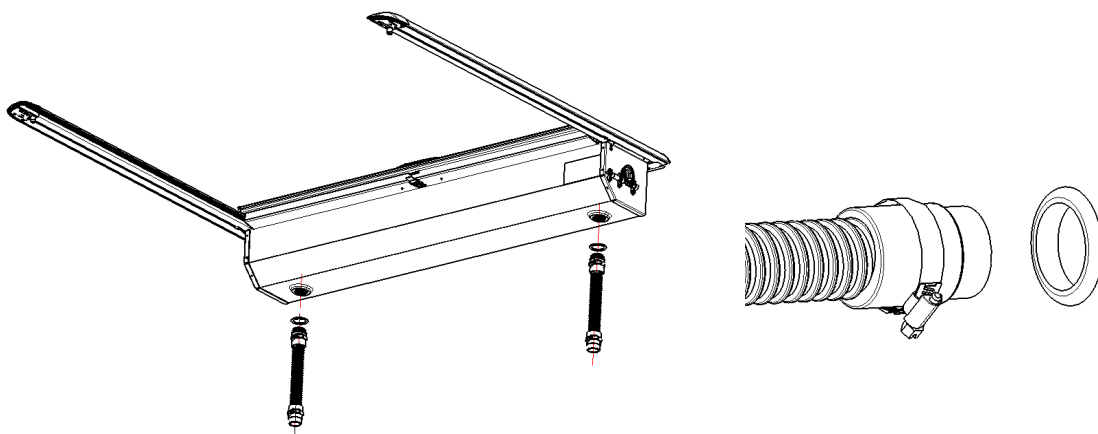


9. Put the rubber foam on the tailgate, as the photo shows above. Close the roller lid and pull it backwards until it touch the rubber foam.

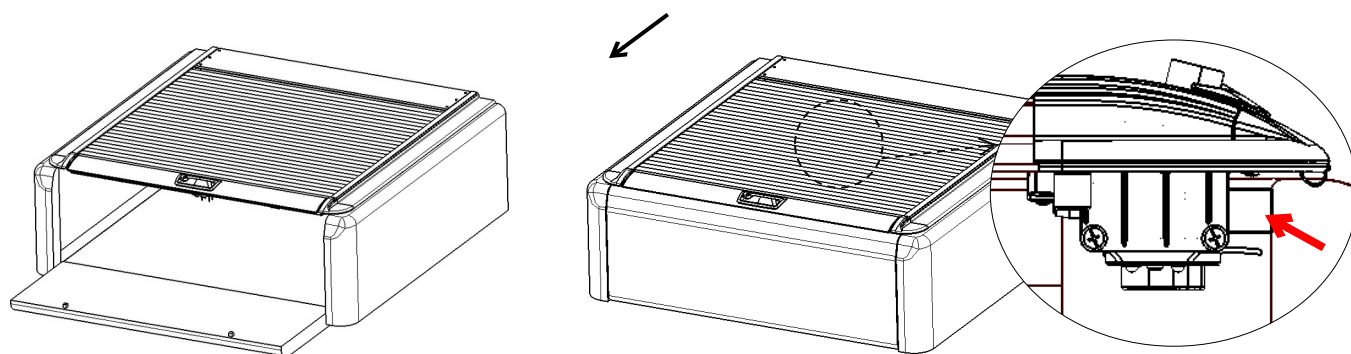


10 . Open the roller lid and put the standard bar to adjust the width between two side rails. Distance between the side rails should be same from front to rear part.

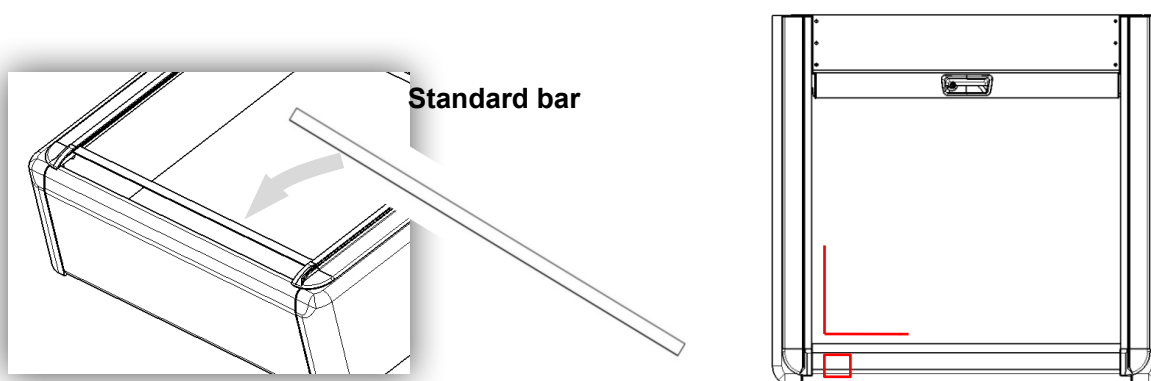


11. As the figure shows, M6 bolt screwed into M6 square nut. Then put the bolts into the side rails, 2 pieces on each side.

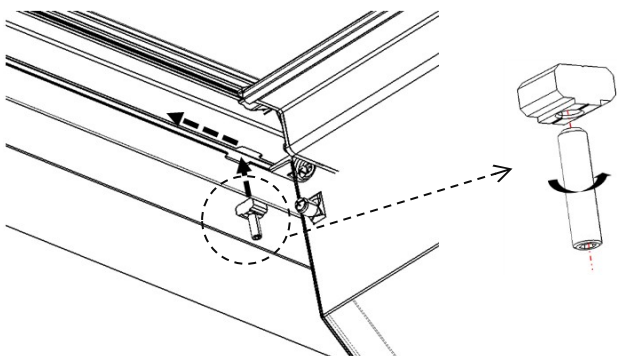


12. Install bracket 2 with . (As the photo shows above)

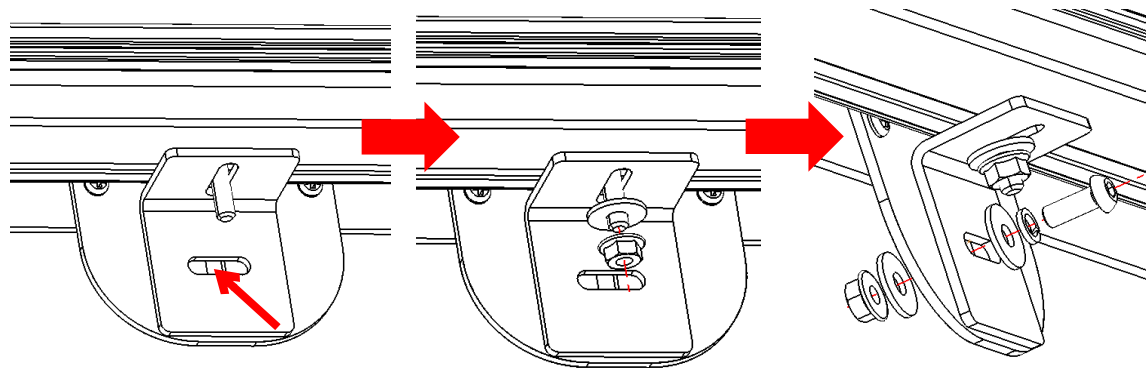


13. Remove the paper on 3M adhesive seal, press it to let the rubber strip stick on the trunk.

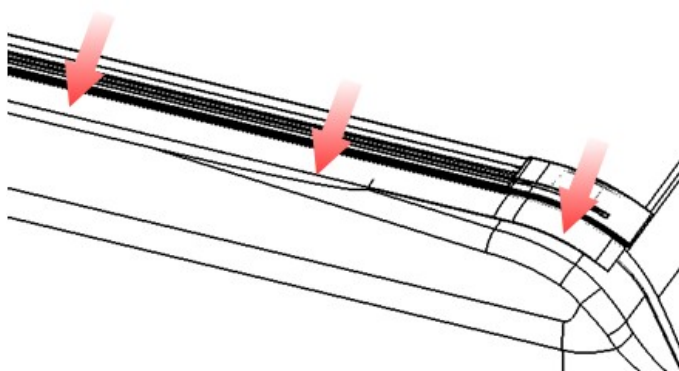

14. Install the drain-pipe at the rear part of the tracks. (Both sides should be same)

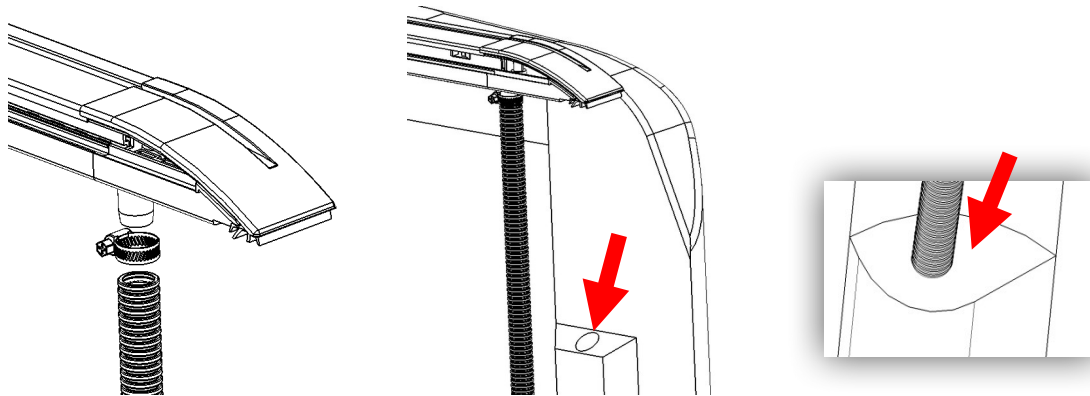

15. As the figure shows, install on tailgate door. Instruction details could be referring to the last page.

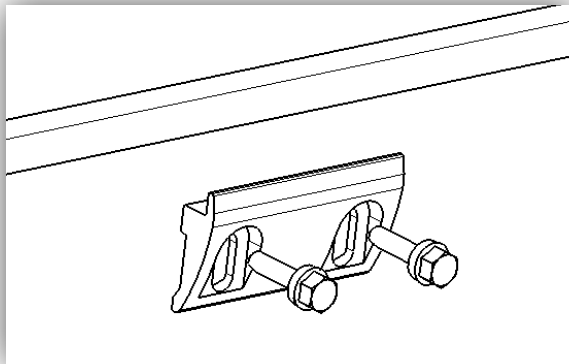

16. If the roller shutter do not runs smoothly, you can follow below steps: (as the picture shows)

- a. Put some lubricating oil on the track.
- b. Adjust the spring.

(Notice: These 2 steps should be done every 3 months; also you can do it if needed.)

