

Installation Instruction

For Mitsubishi Triton 2024













Before Installation

Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.

Please periodically check and retighten all the hardware and clean the investment for a refresh look.



The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

PART LIST

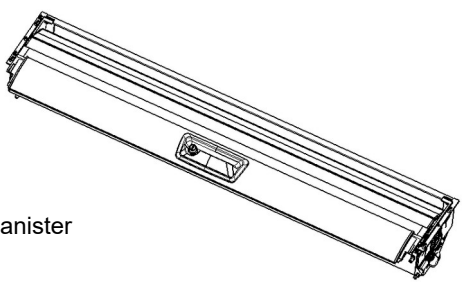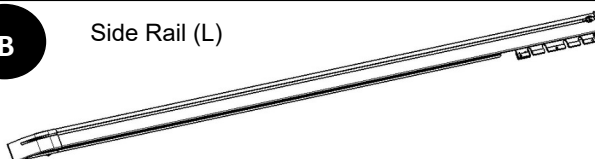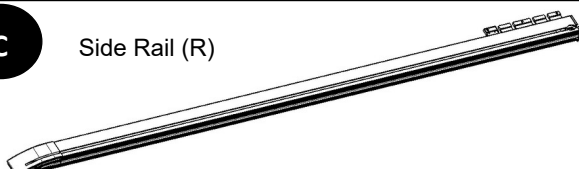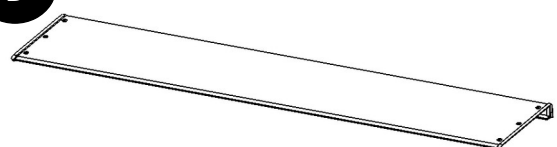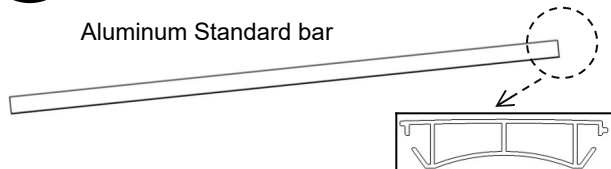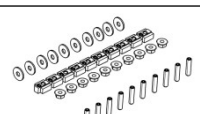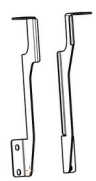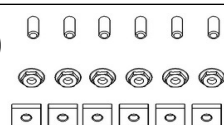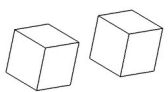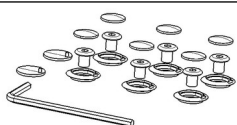
A  Canister	B  Side Rail (L)	C  Side Rail (R)	
D  Top COVER	E  Aluminum Standard bar		
1  M6 Inner hex bolt& nut (For brackets)	2  M6 bolt & washer (For Canister -Side rail)	3  Front & middle Bracket	4  Rear long bracket
5  M6 flange nut (For side rail)	6  Rear Drainage Tube	7  Front Drainage Tube	8  Spare seal: Thick: 10mm Spare seal: Thick: 5mm
9  Positioning foam pad	10  M5 bolt & Rubber cap (For top cover)	11	



Tools and materials needed

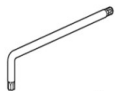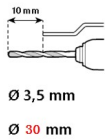


T15, T30

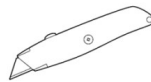


Installation Steps


1. Cleaning the trunk and margin by water X, dismantling the other unnecessary part for clean and tidy.

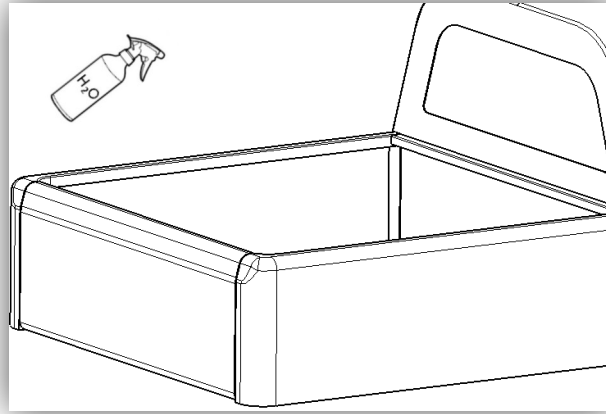


2. Install side rails \ on canister with ② (M6 Inner hex bolt & D6 flat washer)

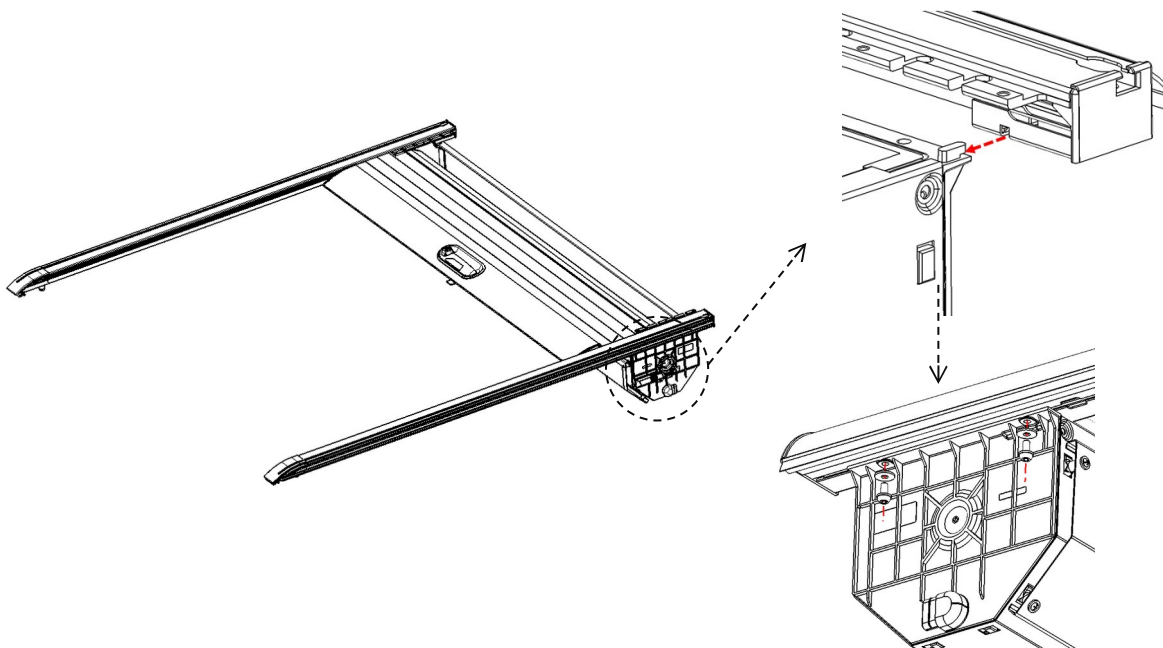


3. Install front drainage tube on bottom of the canister.

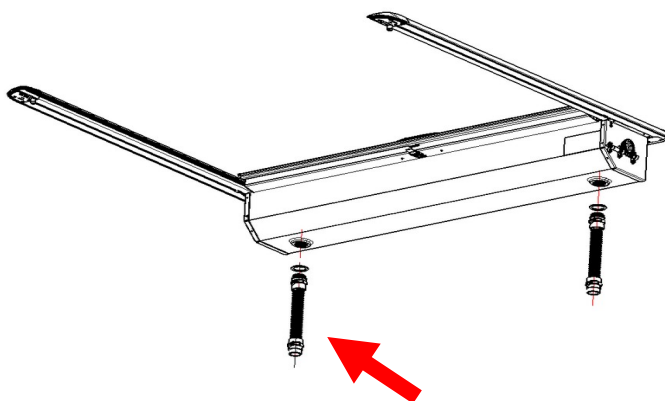


4. Install the top cover on canister , with ⑩ (M5_6 Inner hex bolt & Plastic cap)

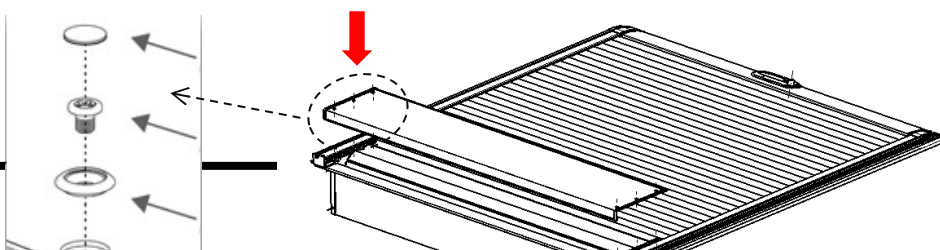

5. Drill out the front pilot holes in the truck bed with 45mm holesaw. To avoid getting rust, you should paint the drain hole on truck bed before putting on the grommet.

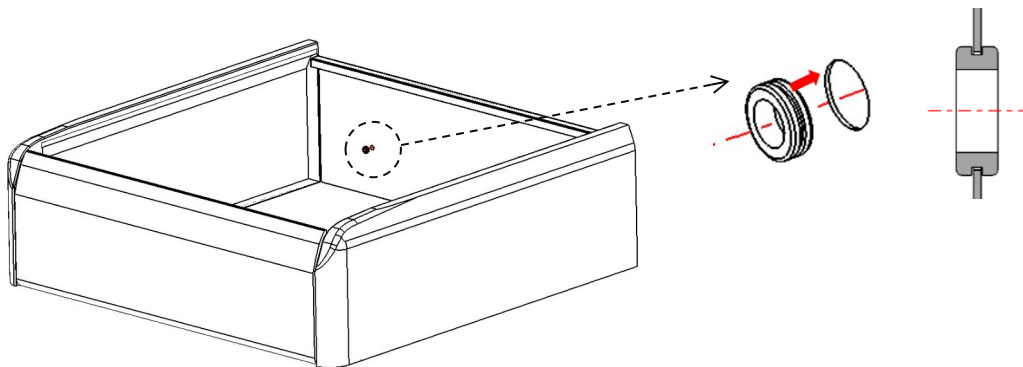


6. Install the front foam tape on top of the bulkhead.


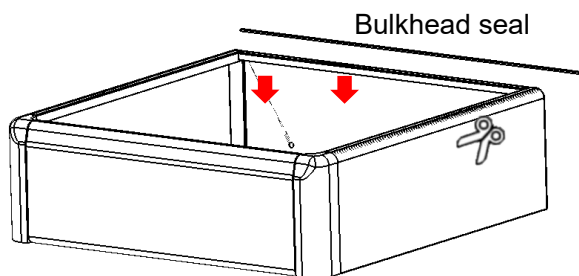


7. Put the roller shutter on truck bed, then route the drainage tube.


8. Put the foam pad on the tailgate, as the photo shows above. Close the roller lid and pull it backwards until it touch the foam pad.

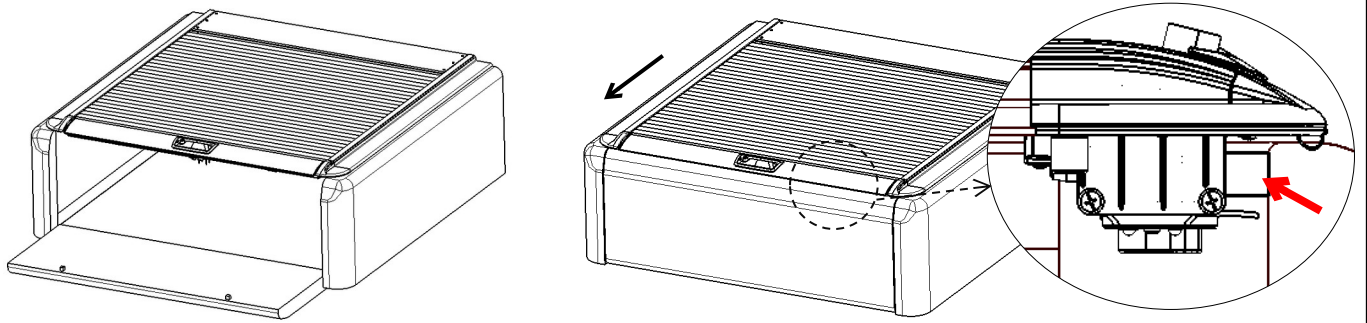

9. Open the roller lid and put the standard bar to adjust the width between two side rails. Distance between the side rails should be same from front to rear part.


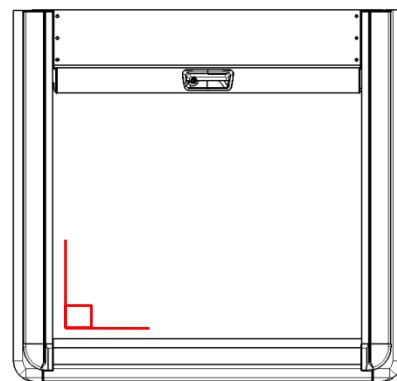
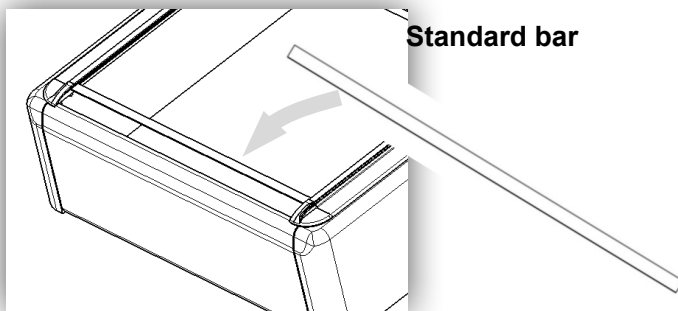


10. As the figure shows, slide in the ⑤ M6 bolt & T-nut combo in side rail, 5 sets on each side.

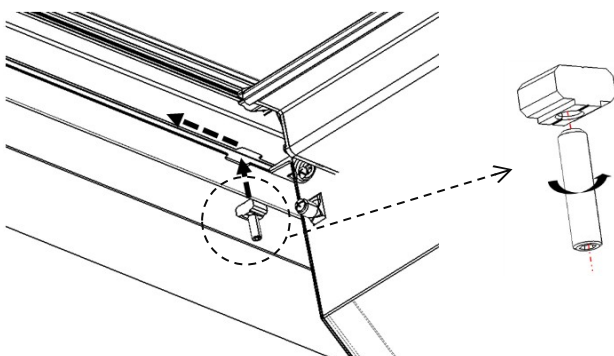


11. Install front & middle bracket with ① & OE clamps.

Install rear long bracket with bolts on original tie hook and ①.

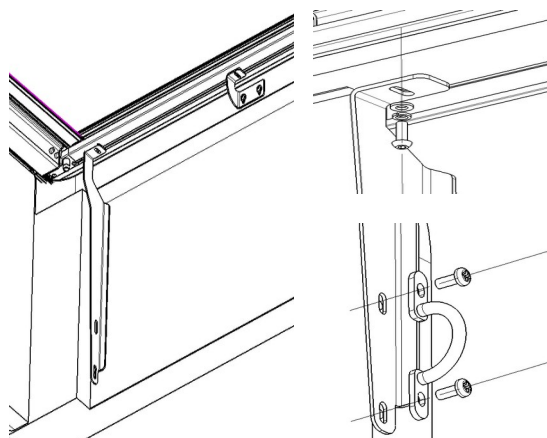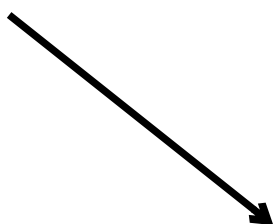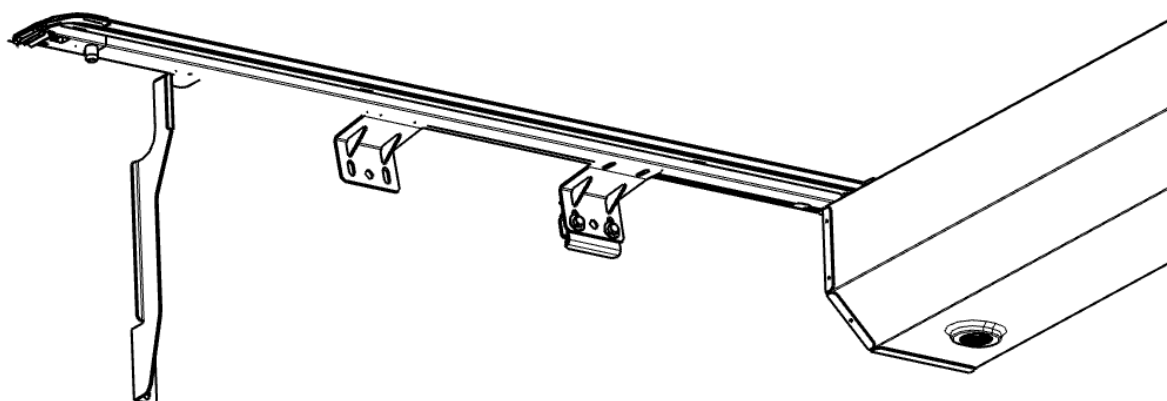

12. Install the drain-pipe at the rear part of the tracks. (Both sides should be same).

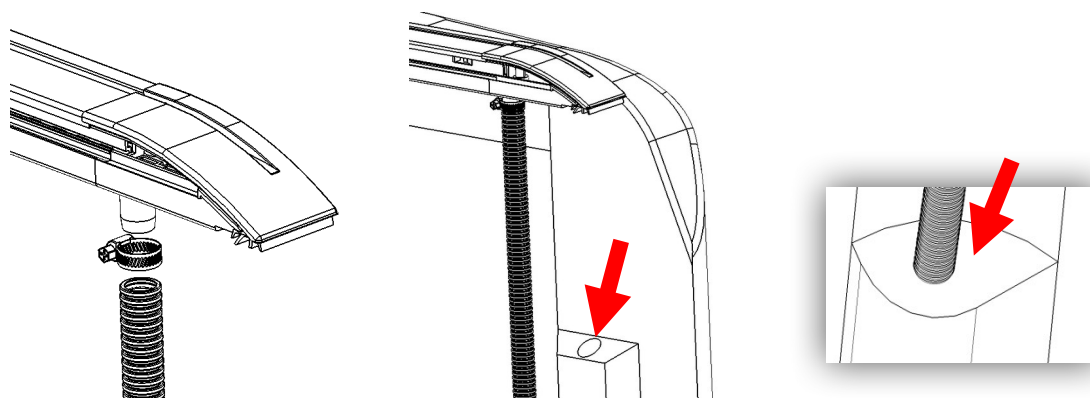

15. If the roller shutter do not runs smoothly, you can follow below steps: (as the picture shows)

a. Put some lubricating oil on the track.

b. Adjust the spring.

(Notice: These 2 steps should be done every 3 months; also you can do it if needed.)

