








INSTALLATION INSTRUCTION

WN-PRD150-NBAR-SS-B

ATTENTION

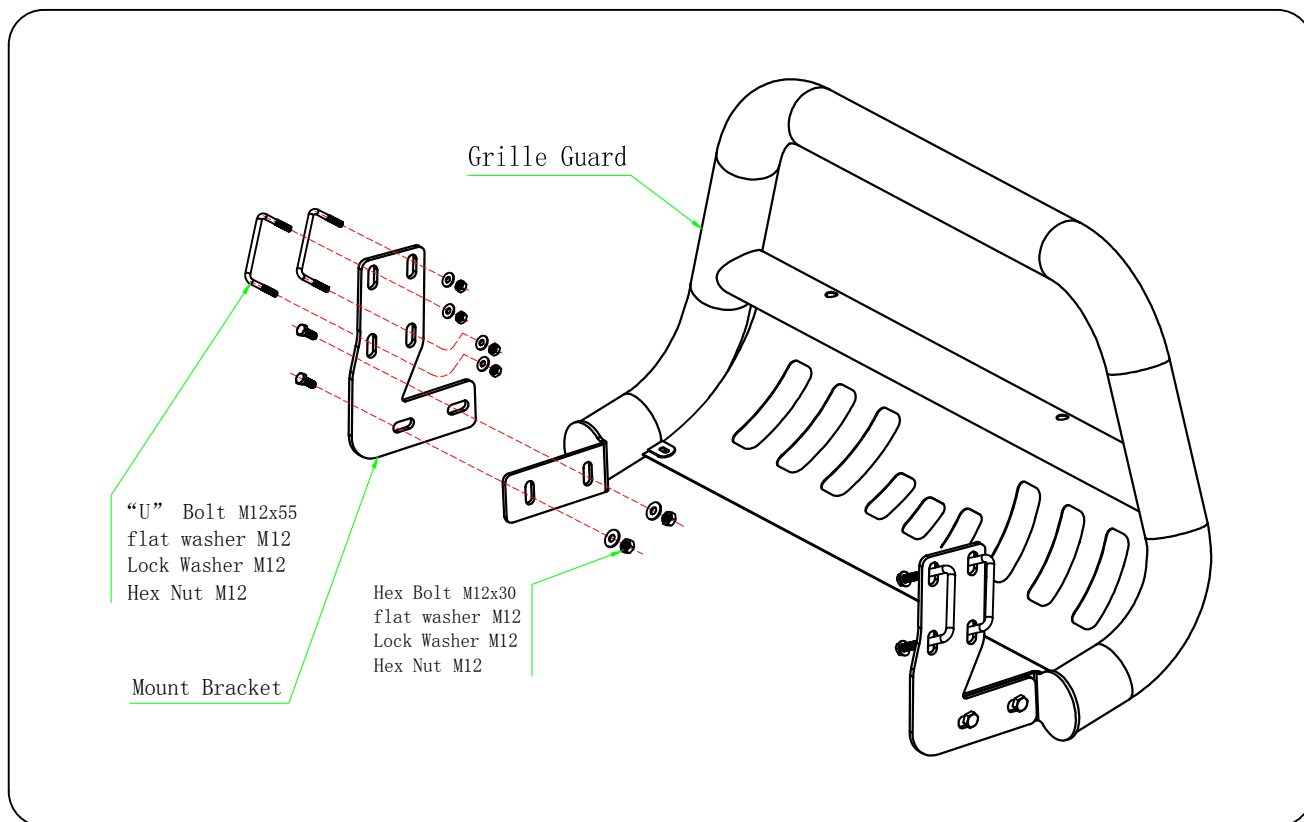
1. Please read this installation instruction before installing this part.
When install it, please pay attention to protecting your vehicles.
2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.

PARTS LIST

No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
A	Grille Guard		1		E	flat washer		12	M12
B	Mount Bracket		2		F	Lock Washer		12	M12
C	“U” Bolt		4		G	Hex Nut		12	M12
D	Hex Bolt		4	M12x30					



INSTALLATION STEPS



STEP 1: Check the parts in the box carefully if match above list .

STEP 2: Pls prepare the tools for installation, follow as: 10-12wrench, 17-19 wrench.

STEP 3: Put the mount bracket (B) into the girder of the car, and tighten it with M2x55 “U” bolt (D) .

STEP 4: Install the grille guard (A) to the mount bracket (B) , and tighten it with M12x30 bolt (E).

STEP 5: Installation is finished.